



10.Front Sub Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the front grille and the front grille side.
<Ref. to EI-38, REMOVAL, Instrument Panel Assembly.>
- 4) Disconnect the connector from front sub sensor.

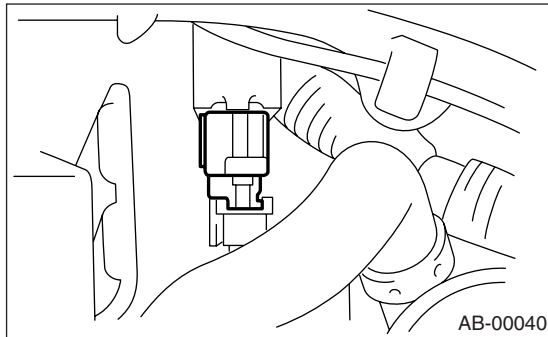

- 5) Loosen the nut and remove the front sub sensor.

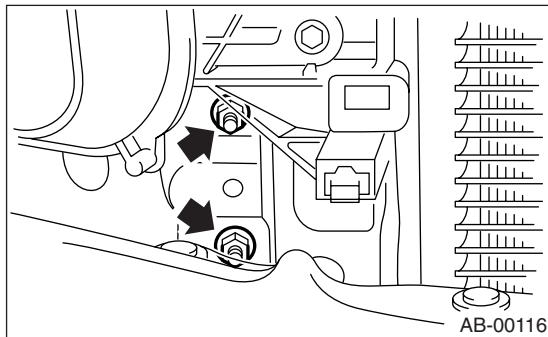

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Tightening torque:

Refer to “**COMPONENT**” of “**General Description**”. <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Front sub sensor, mounting bracket and connector are damaged.
- Airbag is deployed.

AIRBAG SYSTEM (DIAGNOSTICS)

AB(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	4
4. Electrical Component Location	20
5. Airbag Control Module I/O Signal	21
6. Airbag Connector	23
7. Subaru Select Monitor	26
8. Inspection Mode	31
9. Clear Memory Mode	32
10. Airbag Warning Light Illumination Pattern	33
11. Airbag Warning Light Failure	34
12. List of Diagnostic Trouble Code (DTC)	39
13. Diagnostic Chart with Trouble Code	42