


### 5. Passenger's Airbag Module

#### A: REMOVAL

##### CAUTION:

Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-3, CAUTION, General Description.>

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the glove box. <Ref. to EI-35, REMOVAL, Glove Box.>
- 4) Disconnect the airbag connector.
- 5) Remove the three bolts, and then carefully remove the airbag module.

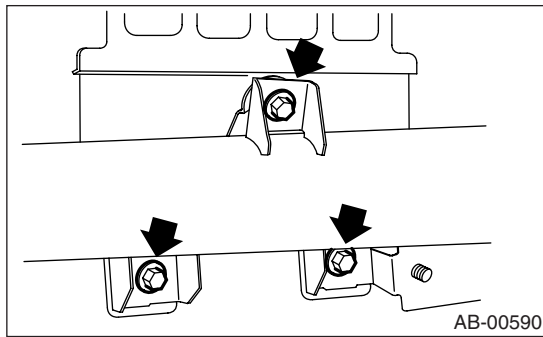

- 6) Refer to “CAUTION” for handling of a removed airbag module. <Ref. to AB-3, CAUTION, General Description.>

#### B: INSTALLATION

Install in the reverse order of removal.

##### CAUTION:

Do not allow harness and connectors to interfere or get tangled up with other parts.

##### *Tightening torque:*

Refer to “COMPONENT” of “General Description”. <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>

#### C: INSPECTION

##### CAUTION:

Refer to “CAUTION” of “General Description” before handling the airbag module. <Ref. to AB-3, CAUTION, General Description.>

Check for the following, and replace the damaged parts with new parts.

- Airbag module, harness, connector and mounting bracket are damaged. <Ref. to AB-11, PASSENGER'S AIRBAG MODULE, INSPECTION, Inspection Locations After a Collision.>