


## 8. Side Airbag Sensor

### A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 3) Remove the front outer belt. <Ref. to SB-11, FRONT OUTER BELT, REMOVAL, Front Seat Belt.>
- 4) Detach the side airbag sensor, and then disconnect the airbag connector.

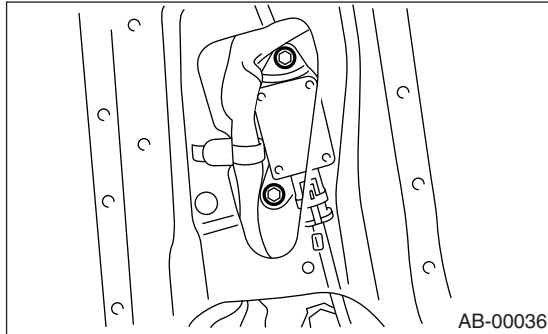

### B: INSTALLATION

#### CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Install in the reverse order of removal.

#### *Tightening torque:*

*Refer to “COMPONENT” of “General Description”. <Ref. to AB-2, SRS AIRBAG, COMPONENT, General Description.>*

### C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Bracket connector for side airbag sensor is damaged.
- Side airbag is deployed.