


10. Airbag Warning Light Illumination Pattern

A: INSPECTION

Turn the ignition switch to ON, and confirm that the airbag warning light remains on for approx. 6 seconds then turns off, even with the ignition switch left ON.

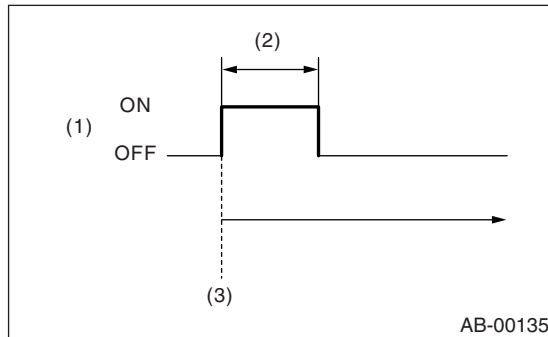

- (1) Airbag warning light
- (2) Approx. 6 sec.
- (3) Ignition switch ON