


Electrical Component Location

AIRBAG SYSTEM (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

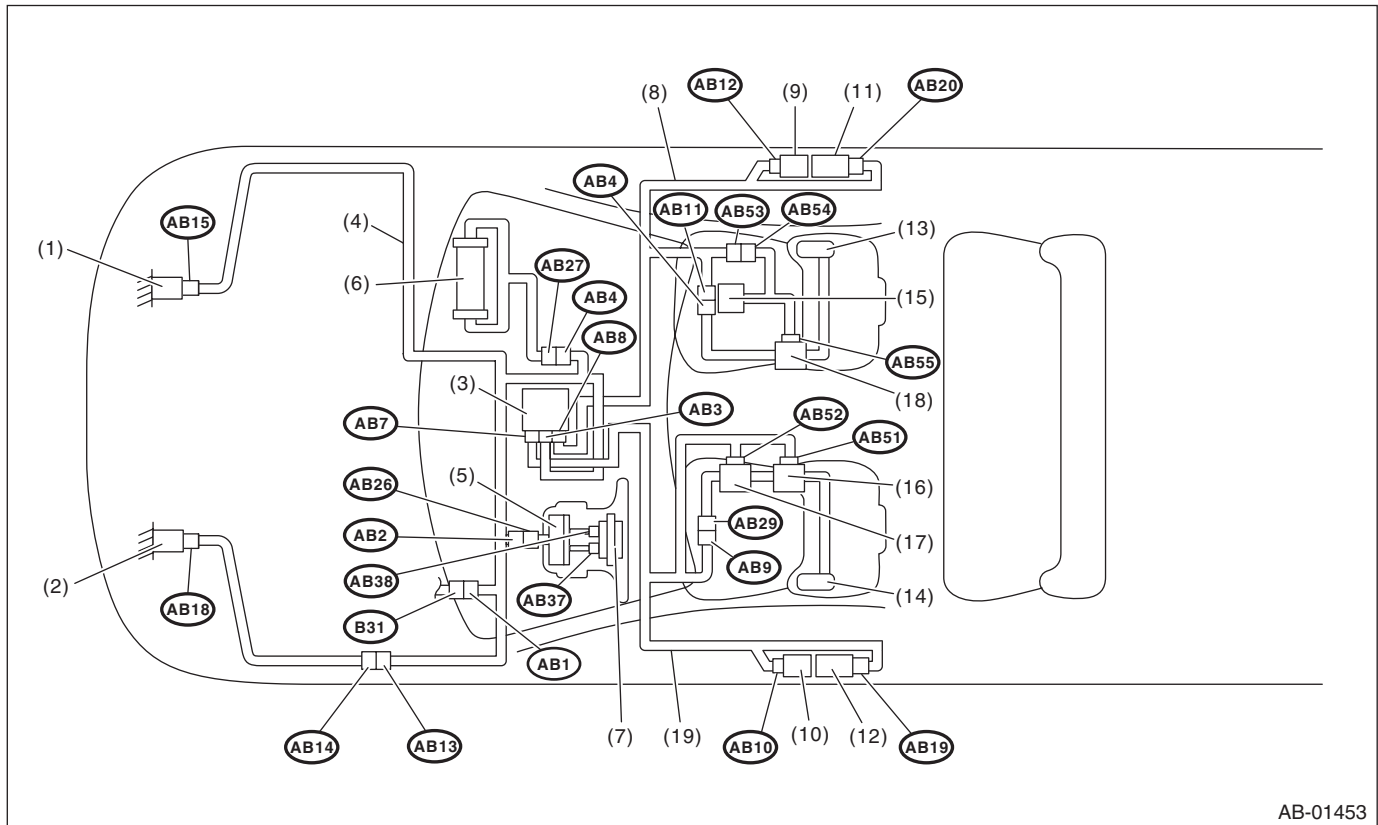

AB-01453

- | | | |
|--|----------------------------------|--|
| (1) Front sub sensor (RH) | (7) Driver's airbag inflator | (14) Side airbag inflator (LH) |
| (2) Front sub sensor (LH) | (8) Airbag rear harness (RH) | (15) Occupant detection control module |
| (3) Airbag control module with built-in safing and electric sensor | (9) Side airbag sensor (RH) | (16) Buckle switch (LH) |
| (4) Airbag main harness | (10) Side airbag sensor (LH) | (17) Seat position sensor (LH) |
| (5) Roll connector | (11) Seat belt pretensioner (RH) | (18) Buckle switch (RH) |
| (6) Passenger's airbag inflator | (12) Seat belt pretensioner (LH) | (19) Airbag rear harness (RH) |
| | (13) Side airbag inflator (RH) | |

Connector No.	(AB1)	(AB2)	(AB3)	(AB4)	(AB7)	(AB8)	(AB9)	(AB10)	(AB11)	(AB12)	(AB13)	(AB14)
Pin	12	4	28	4	12	12	2	4	2	4	2	2
Color	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow	Yellow
Male/Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Female	Male

Connector No.	(AB15)	(AB18)	(AB19)	(AB20)	(AB26)	(AB27)	(AB28)	(AB29)	(AB37)	(AB38)	(AB51)	(AB52)
Pin	2	2	2	2	4	4	2	2	2	2	2	2
Color	Yellow	Yellow	Black	Black	Yellow	Yellow	Yellow	Yellow	Orange	Black	Yellow	Yellow
Male/Female	Female	Female	Female	Female	Male	Male	Male	Male	Female	Female	Female	Female

Connector No.	(AB53)	(AB54)										
Pin	4	4										
Color	Yellow	Yellow										
Male/Female	Female	Male										