

### 9. Clear Memory Mode

#### A: OPERATION

Clear the memory in the following steps after the malfunction is repaired.

For details concerning DTC clear operation, refer to Subaru Select Monitor. <Ref. to AB(diag)-27, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.>