

Basic Diagnostic Procedure

AIRBAG SYSTEM (TYPE B) (DIAGNOSTICS)

1. Basic Diagnostic Procedure

A: PROCEDURE

NOTE:

This section applies to vehicles of V.I.N. 733001 or later.

Step	Check	Yes	No
1 CHECK AIRBAG WARNING LIGHT. Turn the ignition switch to ON.	Does airbag warning light turn on?	Go to step 2 .	Go to "Airbag Warning Light Failure". <Ref. to AB(TYPE B)(diag)-37, Airbag Warning Light Failure.>
2 READ DTC. <Ref. to AB(TYPE B)(diag)-29, READ DIAGNOSTIC TROUBLE CODE (DTC), OPERATION, Subaru Select Monitor.>	Is the normal code being detected?	Finish the diagnosis.	Go to step 3 .
3 PERFORM DIAGNOSIS. 1) Determine the possible cause from "List of Diagnostic Trouble Code". <Ref. to AB(TYPE B)(diag)-42, List of Diagnostic Trouble Code (DTC).> 2) Inspect the DTC using "List of Diagnostic Trouble Code (DTC)". 3) Repair the trouble cause. 4) Perform the Clear Memory Mode. <Ref. to AB(TYPE B)(diag)-35, Clear Memory Mode.> 5) Perform the Inspection Mode. <Ref. to AB(TYPE B)(diag)-34, Inspection Mode.> 6) Read any other DTCs displayed.	Is DTC being displayed?	Perform the procedure 1) to 5) in step 3.	Finish the diagnosis.