

9. Clear Memory Mode

A: OPERATION

Clear the memory in the following steps after the malfunction is repaired.

For details concerning DTC clear operation, refer to “Subaru Select Monitor”. <Ref. to AB(TYPE B)(diag)-30, CLEAR MEMORY MODE, OPERATION, Subaru Select Monitor.>