

4. Horn Switch

A: REMOVAL

WARNING:

Before servicing, be sure to read the notes in the AB section for proper handling of the driver's airbag module. <Ref. to AB-3, CAUTION, General Description.>

NOTE:

Horn switch is a unit with the driver's airbag module.


- 1) Disconnect the ground cable from battery.
- 2) Remove the driver's airbag module. <Ref. to AB-13, REMOVAL, Driver's Airbag Module.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between horn switch terminal and airbag module bracket.

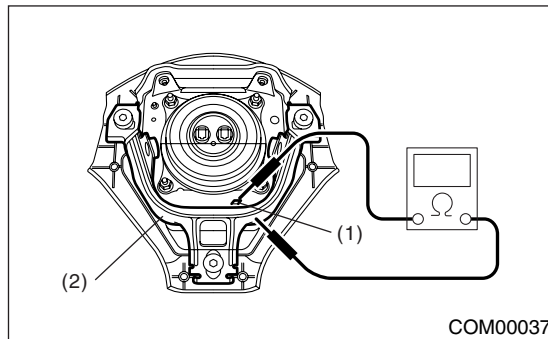

- (1) Horn switch terminal
- (2) Airbag module bracket

Switch position	Terminal No.	Resistance
When air bag module bracket is pushed	Horn switch terminal and airbag module bracket	Less than 1 Ω
When air bag module bracket is separated		1 M Ω or more

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Power Window System	7
3. Power Window Control Switch	8
4. Remote Control Mirror System	10
5. Scalp Cap	11
6. Outer Mirror Assembly	12
7. Outer Mirror	15
8. Remote Control Mirror Switch	16
9. Front Door Glass	17
10. Front Door Regulator and Motor Assembly	21
11. Rear Door Glass	22
12. Rear Door Regulator and Motor Assembly	24
13. Windshield Glass	25
14. Rearview Mirror	28
15. Rear Gate Glass	29
16. Rear Window Defogger System	30
17. Rear Window Defogger	31
18. Rear Quarter Glass	32
19. Sun Roof Glass	33