

## 2. Cruise Control Unit

### A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

### B: REMOVAL

<Ref. to FU(H4SO)-40, REMOVAL, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-45, REMOVAL, Engine Control Module (ECM).>

### C: INSTALLATION

<Ref. to FU(H4SO)-40, INSTALLATION, Engine Control Module (ECM).> <Ref. to FU(H4DOTC)-45, INSTALLATION, Engine Control Module (ECM).>