

7. Neutral Position Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from the neutral position switch, and remove the switch. <Ref. to 5MT-33, BACK-UP LIGHT SWITCH AND NEUTRAL POSITION SWITCH, REMOVAL, Switches and Harness.>


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


Measure the resistance of neutral position switch.

- Non-turbo model

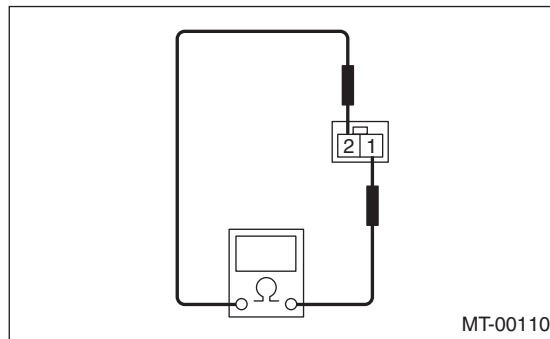

Gear shift position	Terminal No.	Specified resistance
Neutral position	1 and 2	Less than 1 Ω
Other positions		Over 1M Ω

- Turbo model

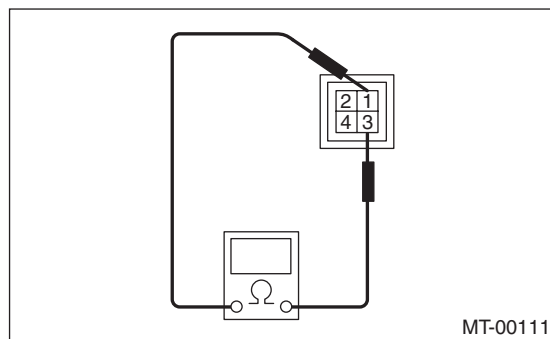

Gear shift position	Terminal No.	Specified resistance
Neutral position	1 and 3	Less than 1 Ω
Other positions		Over 1M Ω

If NG, replace the neutral position switch.

CRUISE CONTROL SYSTEM (DIAGNOSTICS)

CC(ETC)(diag)

	Page
1. Basic Diagnostic Procedure	2
2. General Description	4
3. Electrical Component Location	5
4. Engine Control Module (ECM) I/O Signal	6
5. Subaru Select Monitor	7
6. Diagnostics with Phenomenon	9
7. List of Diagnostic Trouble Code (DTC)	12
8. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	14