


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT


1. UNDER COVER

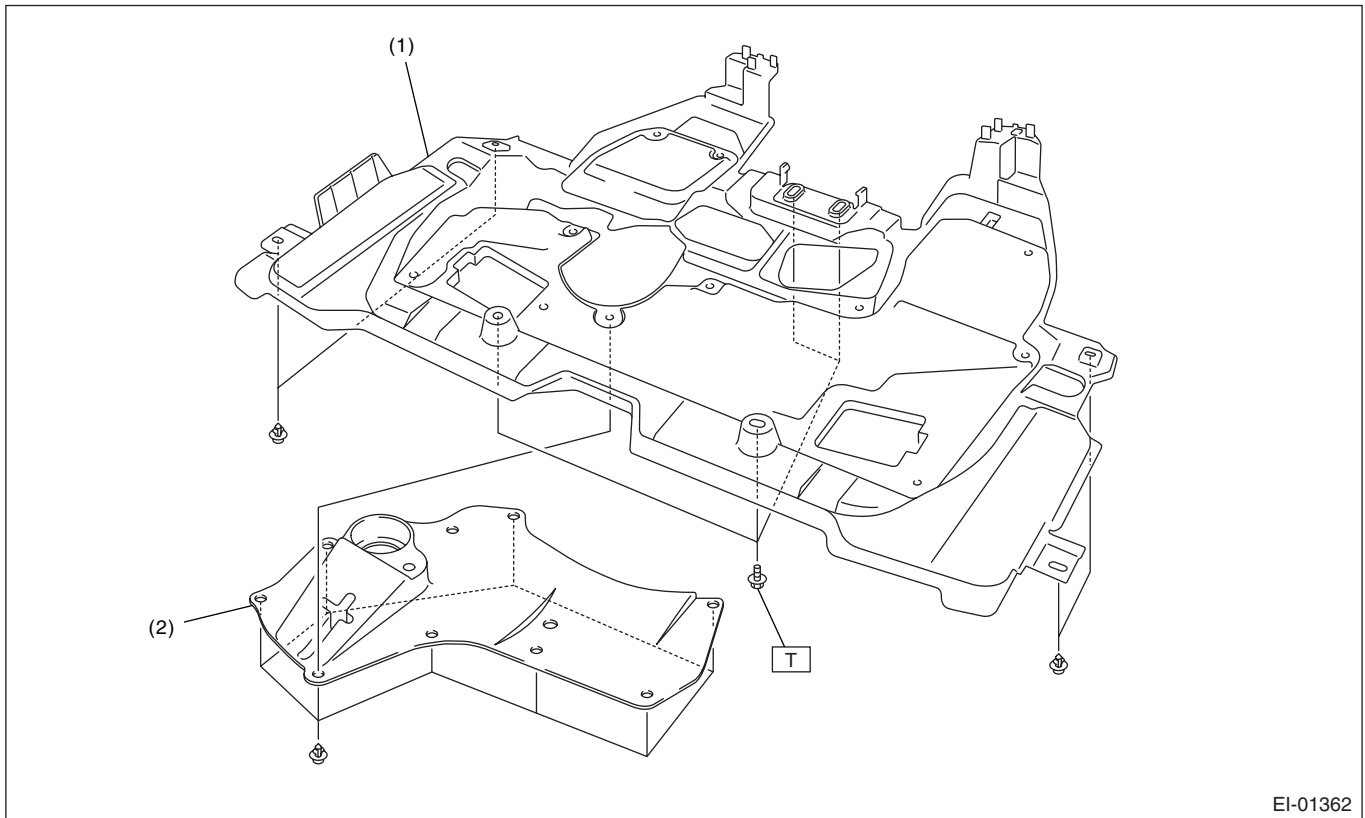

- (1) Front under cover
- (2) Service hole cover


Tightening torque: N·m (kgf-m, ft-lb)
T: 18 (1.84, 13.3)

2. HEAT SHIELD COVER

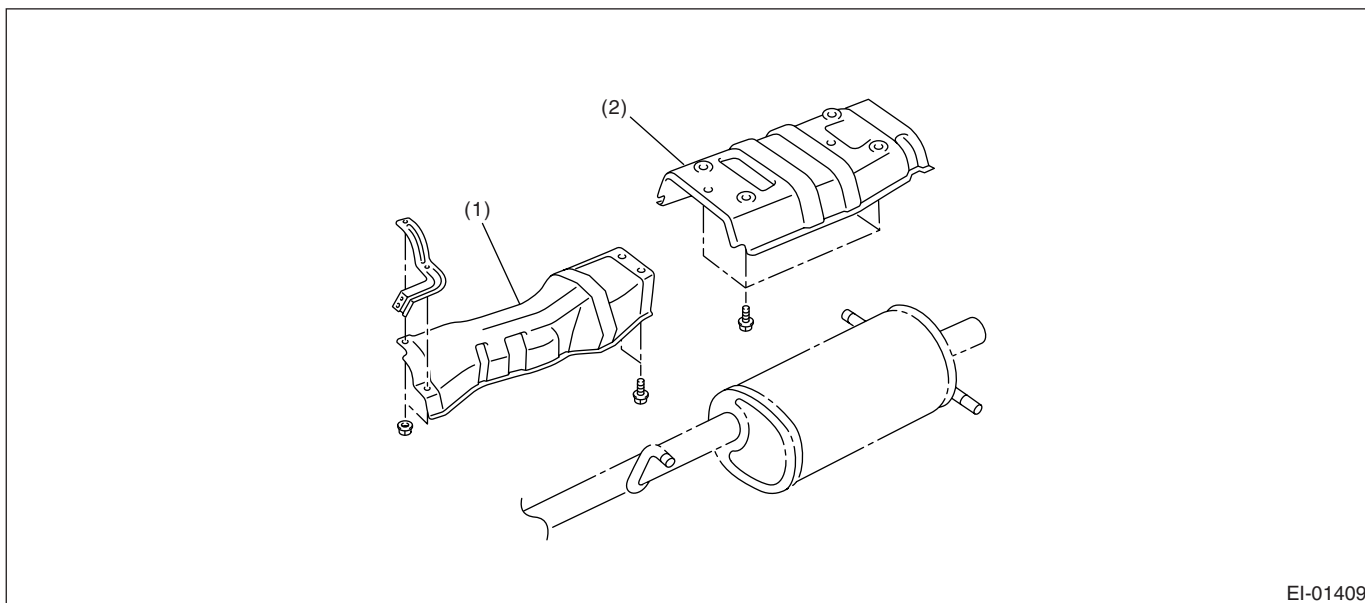

- (1) Center heat shield cover
- (2) Rear heat shield cover

3. FRONT BUMPER

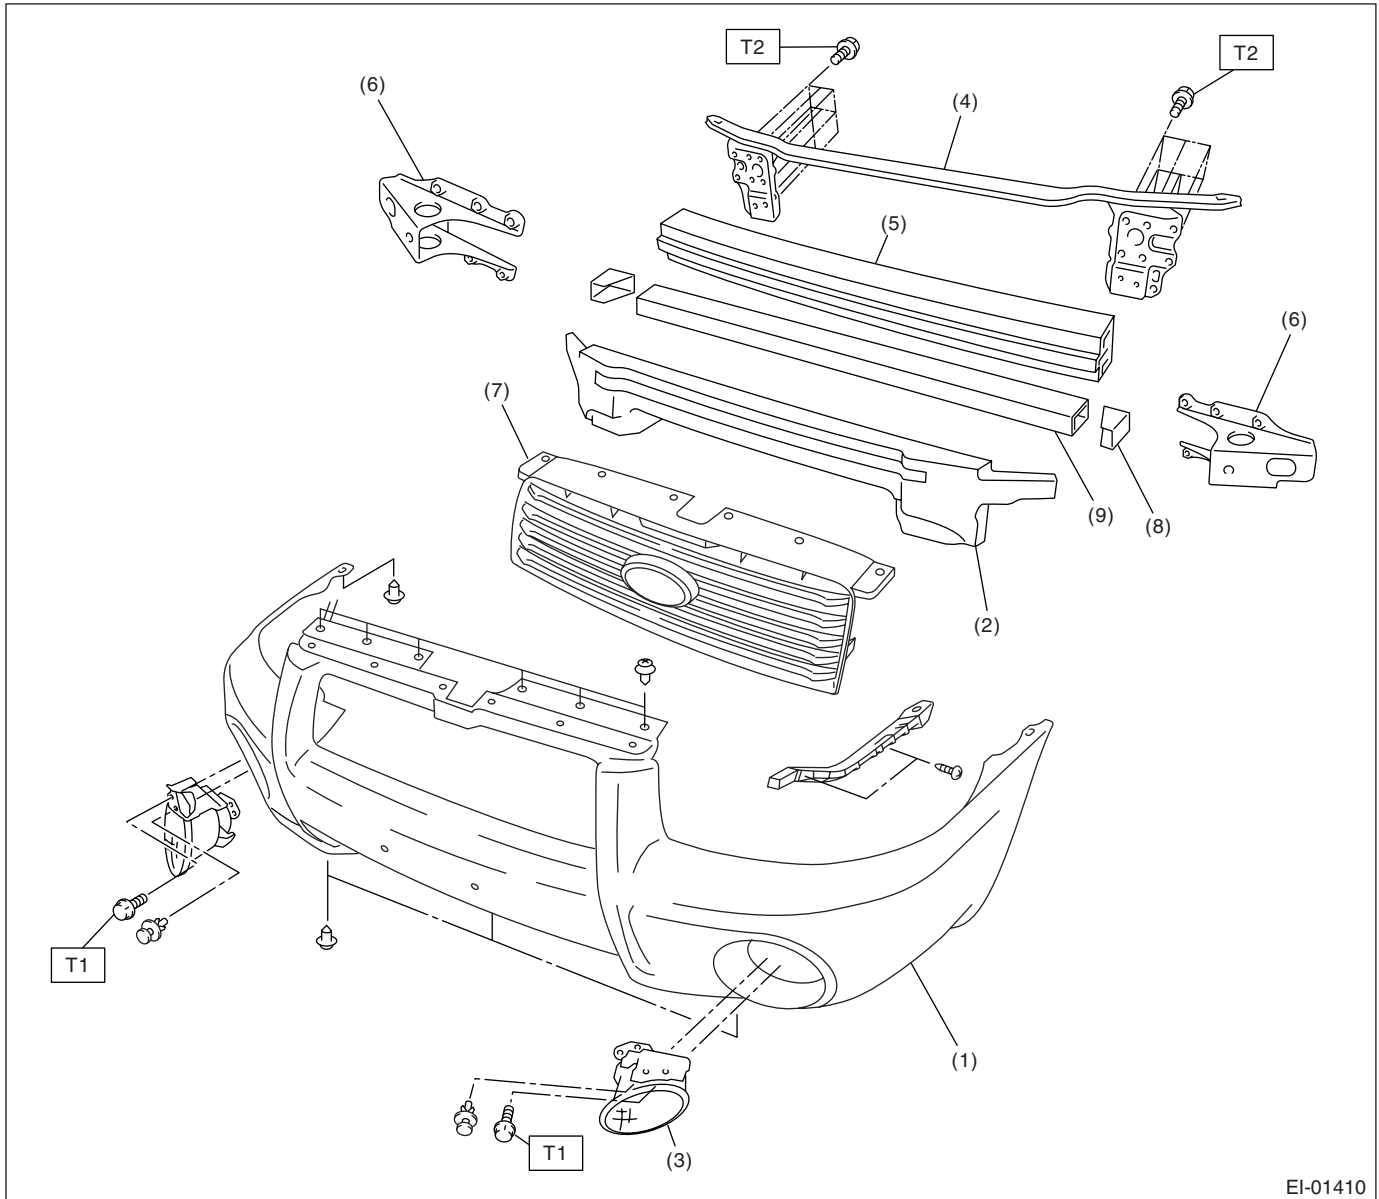

EI-01410

- | | |
|-----------------|------------------------------|
| (1) Bumper face | (6) Side bracket |
| (2) E/A Form | (7) Front grille |
| (3) Fog light | (8) Lower beam reinforcement |
| (4) Upper beam | (9) Lower beam |
| (5) Main beam | |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 7.5 (0.76, 5.53)

T2: 70 (7.1, 51)

General Description

EXTERIOR/INTERIOR TRIM

4. REAR BUMPER

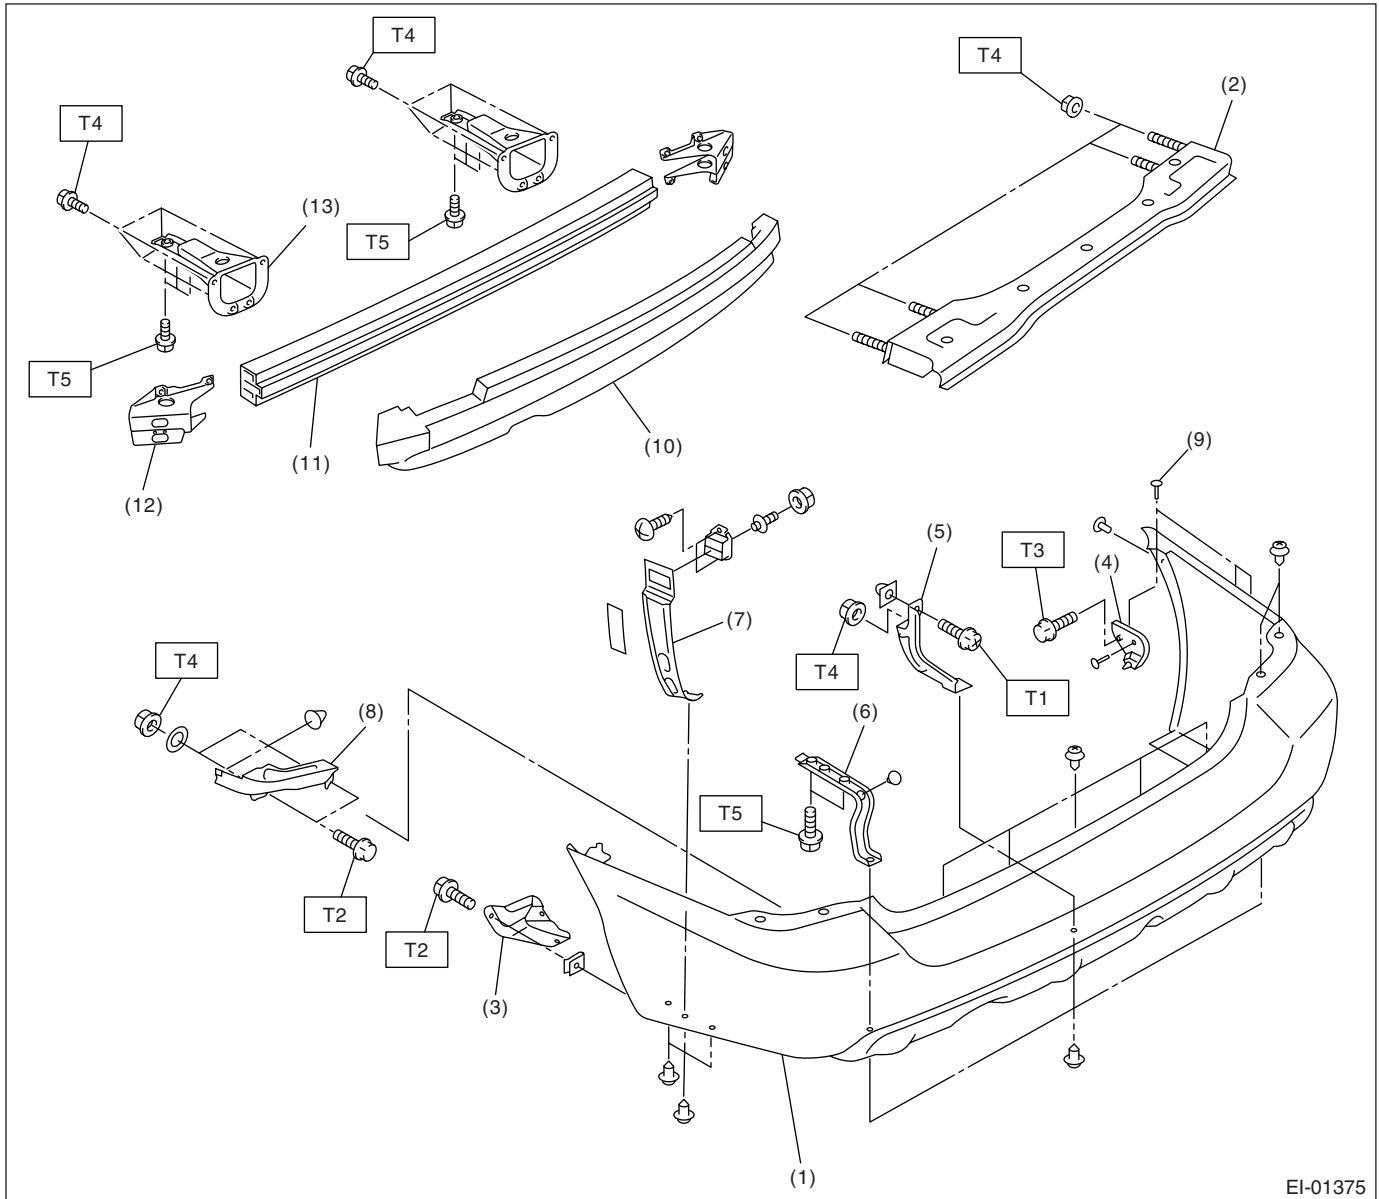

EI-01375

- | | |
|------------------------------------|---------------------------------|
| (1) Bumper face | (8) Rear bumper upper beam side |
| (2) Rear bumper upper beam | (9) Screw |
| (3) Cover rear arch | (10) E/A Form |
| (4) Bracket side rear bumper front | (11) Main beam |
| (5) Bracket center | (12) Side bracket |
| (6) Stay COMPL | (13) Bumper stay |
| (7) Bracket bumper side rear ASSY | |

Tightening torque: N·m (kgf·m, ft·lb)

T1: 1.8 (0.18, 1.3)


T2: 4.4 (0.45, 3.26)

T3: 7.4 (0.75, 5.46)

T4: 32 (3.3, 24)

T5: 93 (9.5, 68.7)

5. MUD GUARD

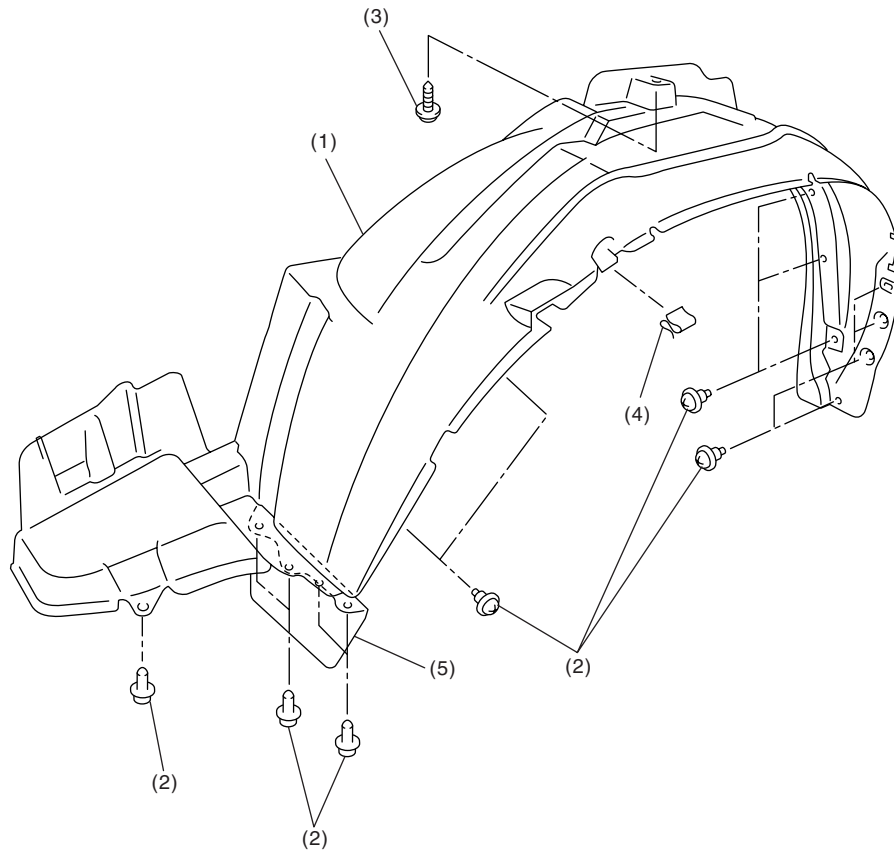

EI-00938

(1) Mud guard
(2) Clip


(3) Screw
(4) Clip (S-shaped)

(5) Air flap

General Description

EXTERIOR/INTERIOR TRIM

6. COWL PANEL

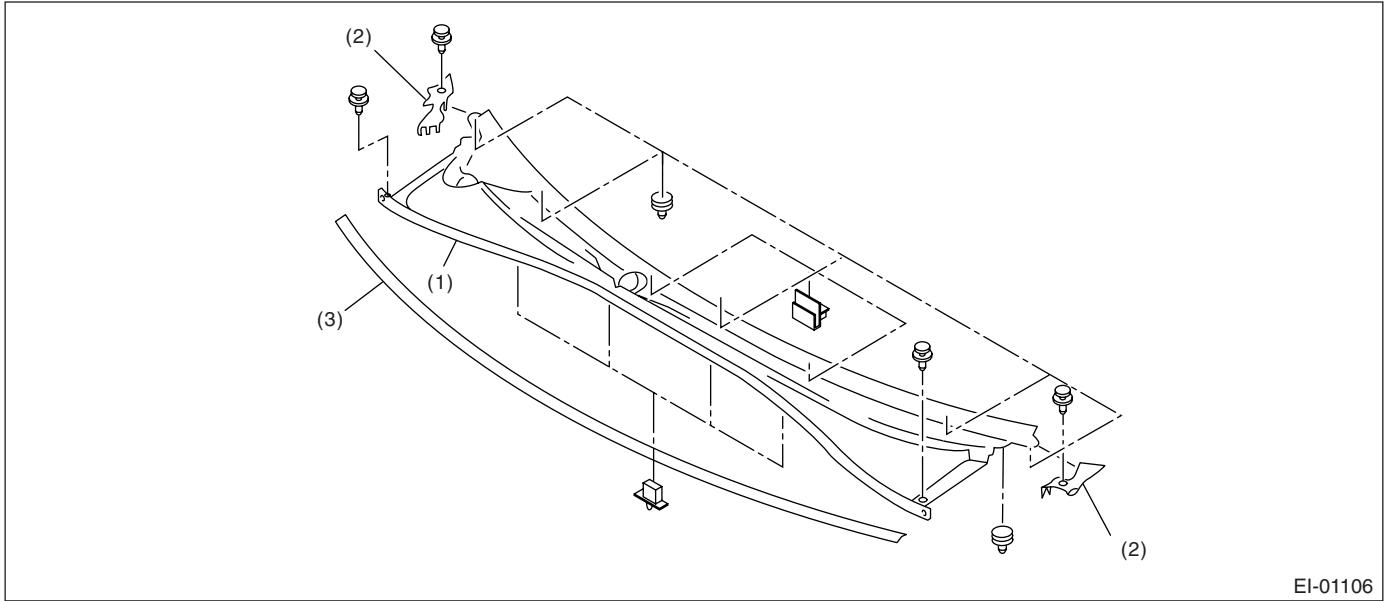


(1) Cowl panel

(2) Cowl panel side

(3) Seal

7. SIDE SILL SPOILER

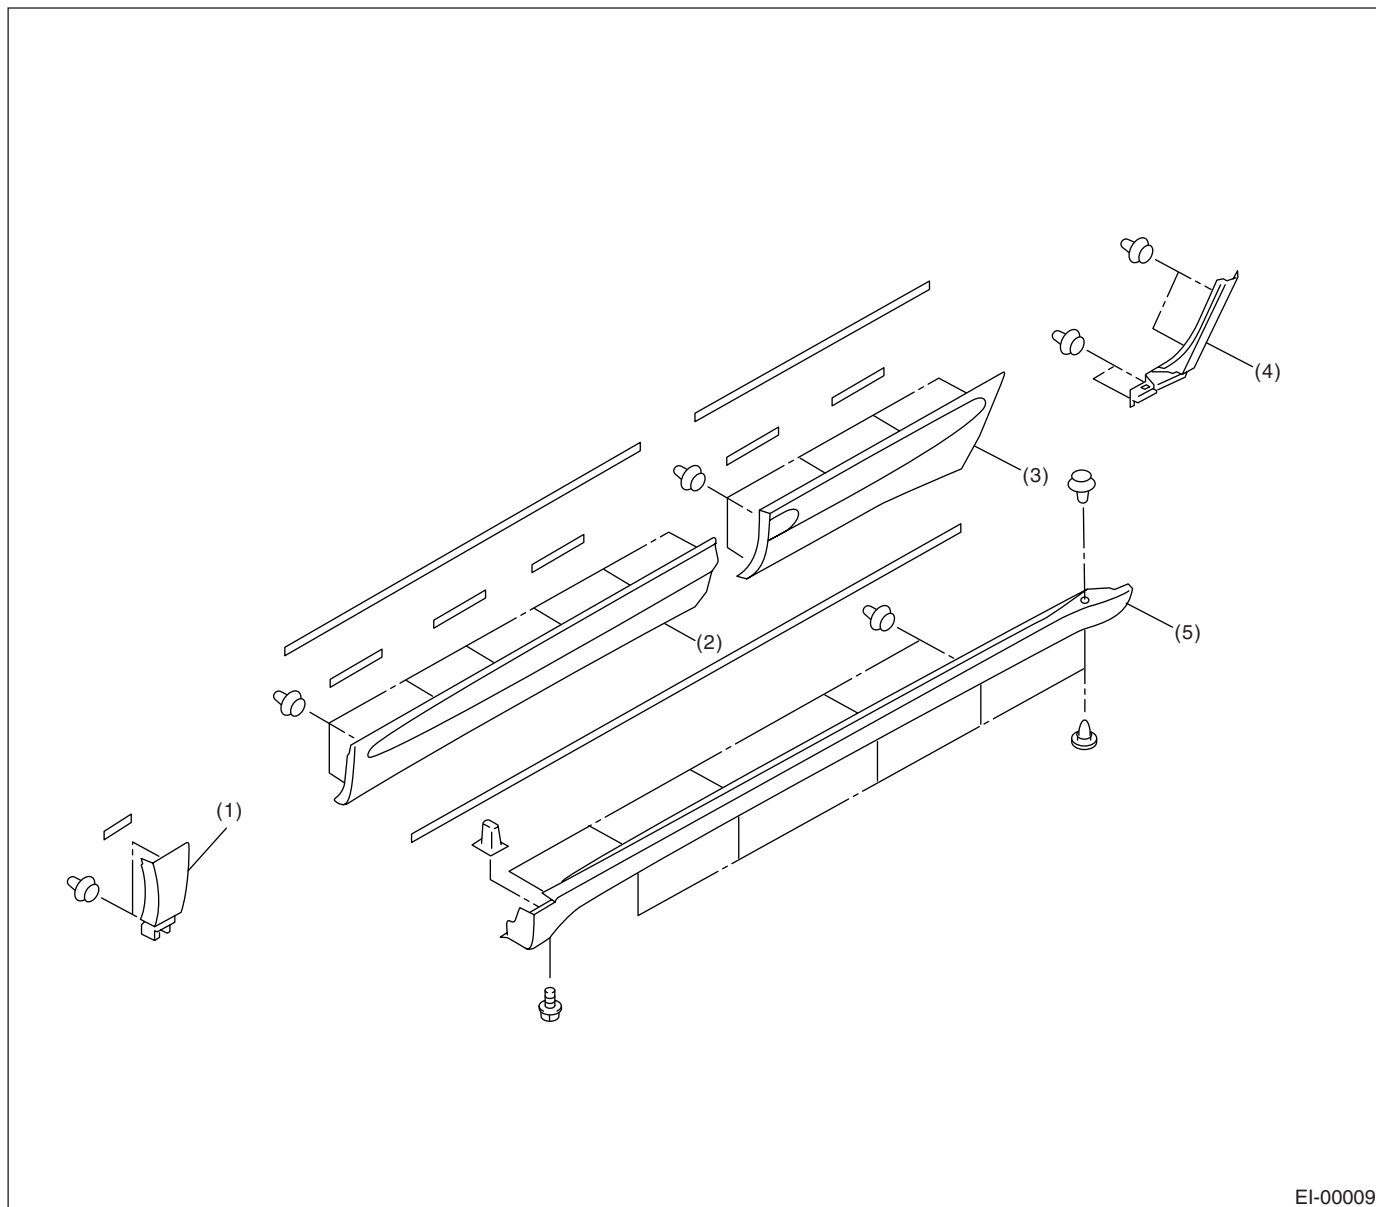

EI-00009

(1) Side garnish (Front fender)

(2) Side garnish (Front door)

(3) Side garnish (Rear door)


(4) Side garnish (Rear quarter)

(5) Side garnish (Side sill)

General Description

EXTERIOR/INTERIOR TRIM

8. ROOF RAIL

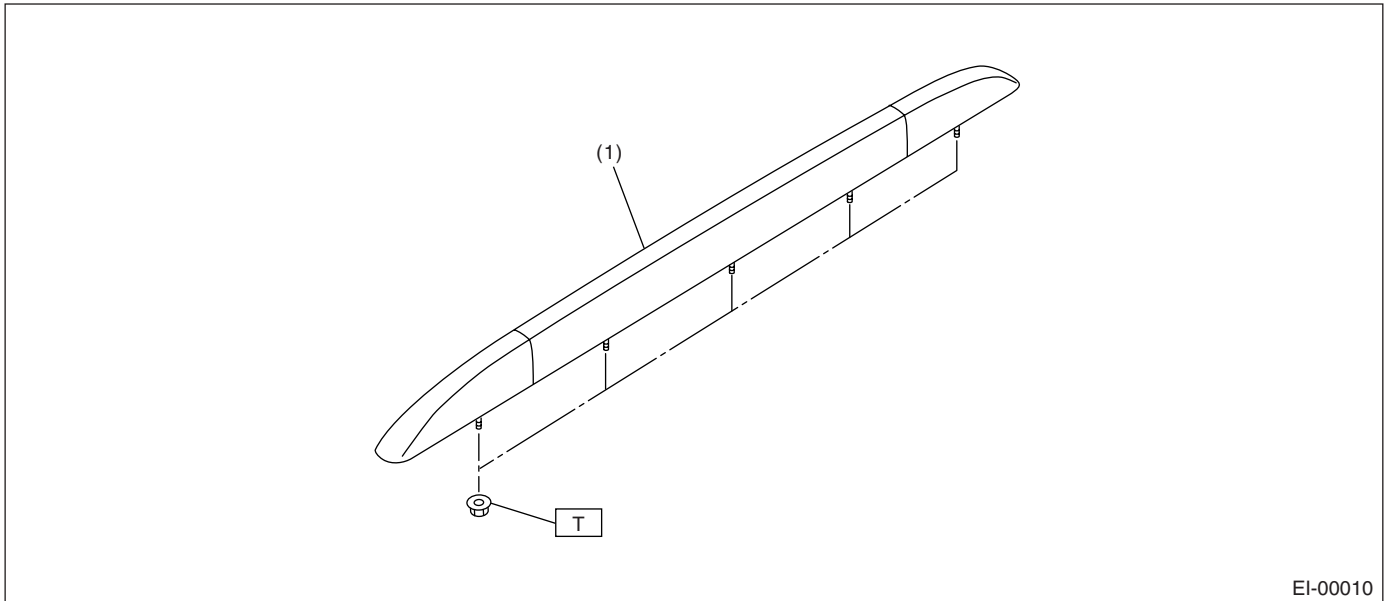


EI-00010

(1) Roof rail

Tightening torque: N·m (kgf·m, ft·lb)
T: 7.5 (0.76, 5.53)

9. DOOR TRIM

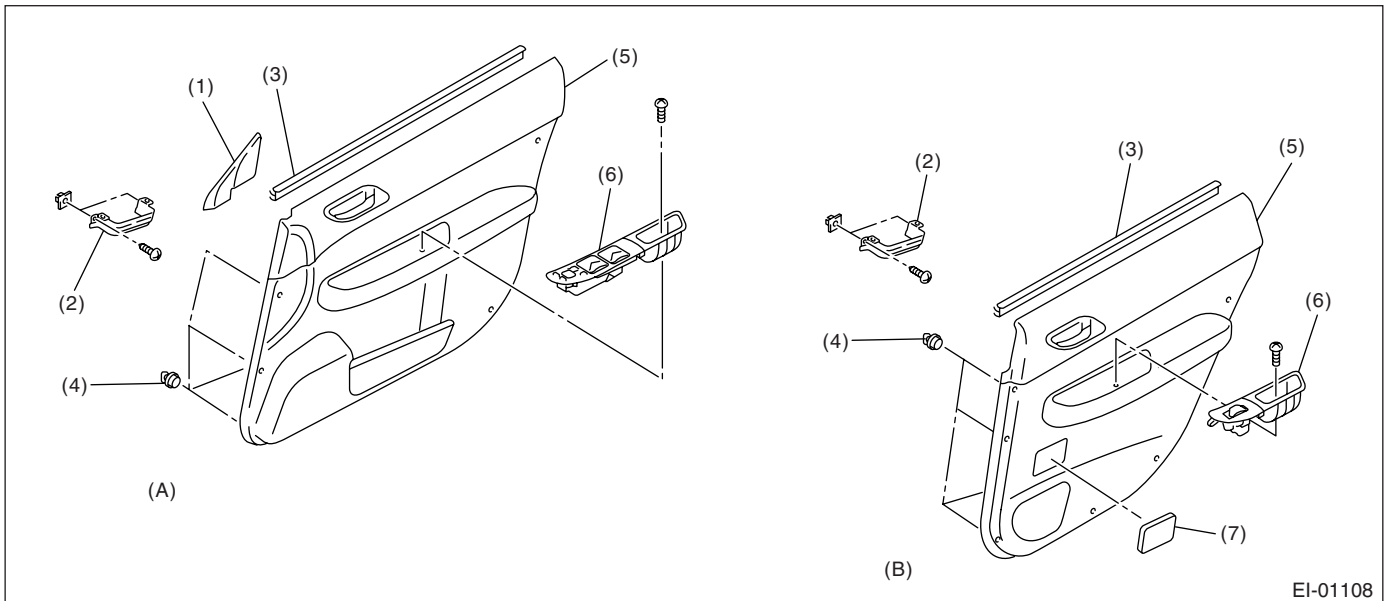

EI-01108

(A) Front door trim


(B) Rear door trim

(1) Gusset cover
(2) Bracket
(3) Upper weather strip

(4) Clip
(5) Trim panel

(6) Power window switch cover
(7) Cover

10.REAR GATE TRIM

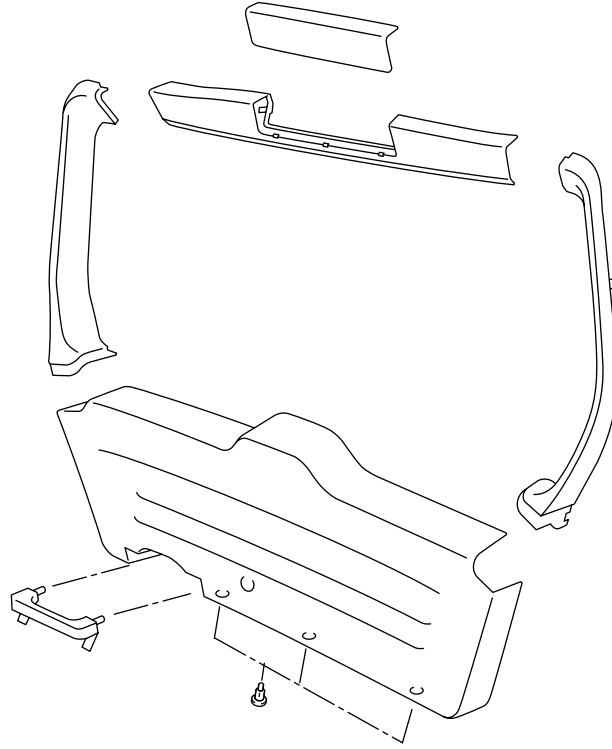


EI-00012

General Description

EXTERIOR/INTERIOR TRIM


11.CONSOLE BOX

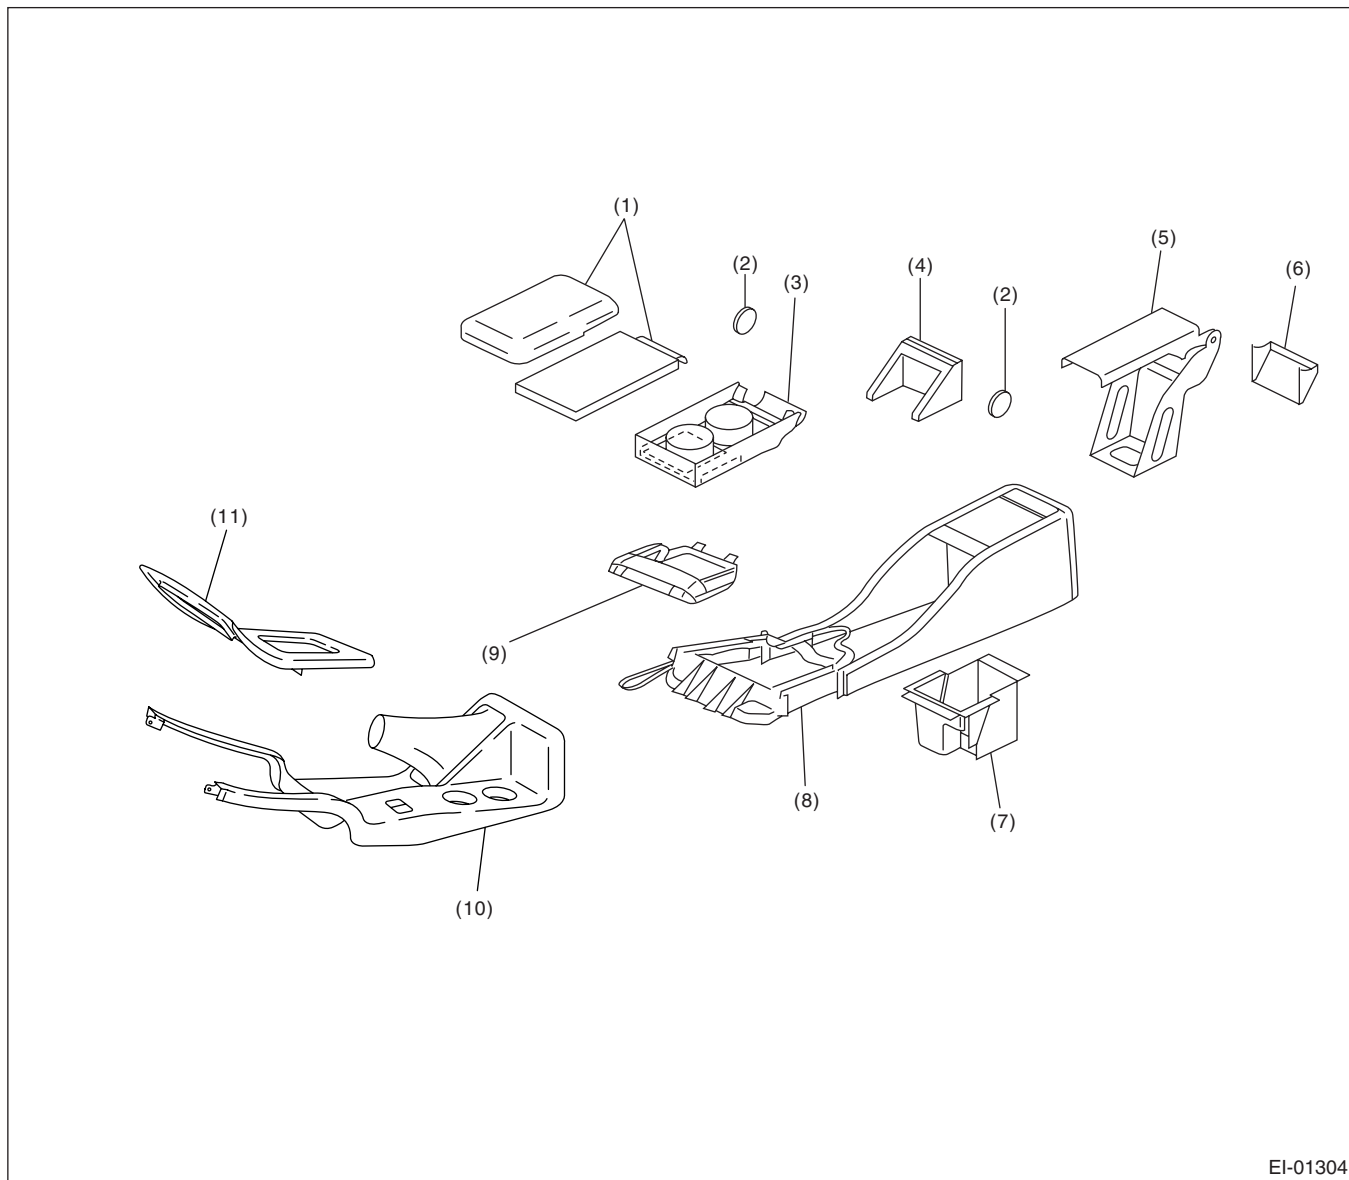

EI-01304

- | | | |
|-----------------------|----------------------|--------------------------|
| (1) Arm cover | (5) Armrest frame | (9) Console lid and tray |
| (2) Hinge cover | (6) Hinge rear cover | (10) Console cover |
| (3) Cup holder | (7) Console pocket | (11) Front cover |
| (4) Hinge front cover | (8) Console box | |

12. INSTRUMENT PANEL

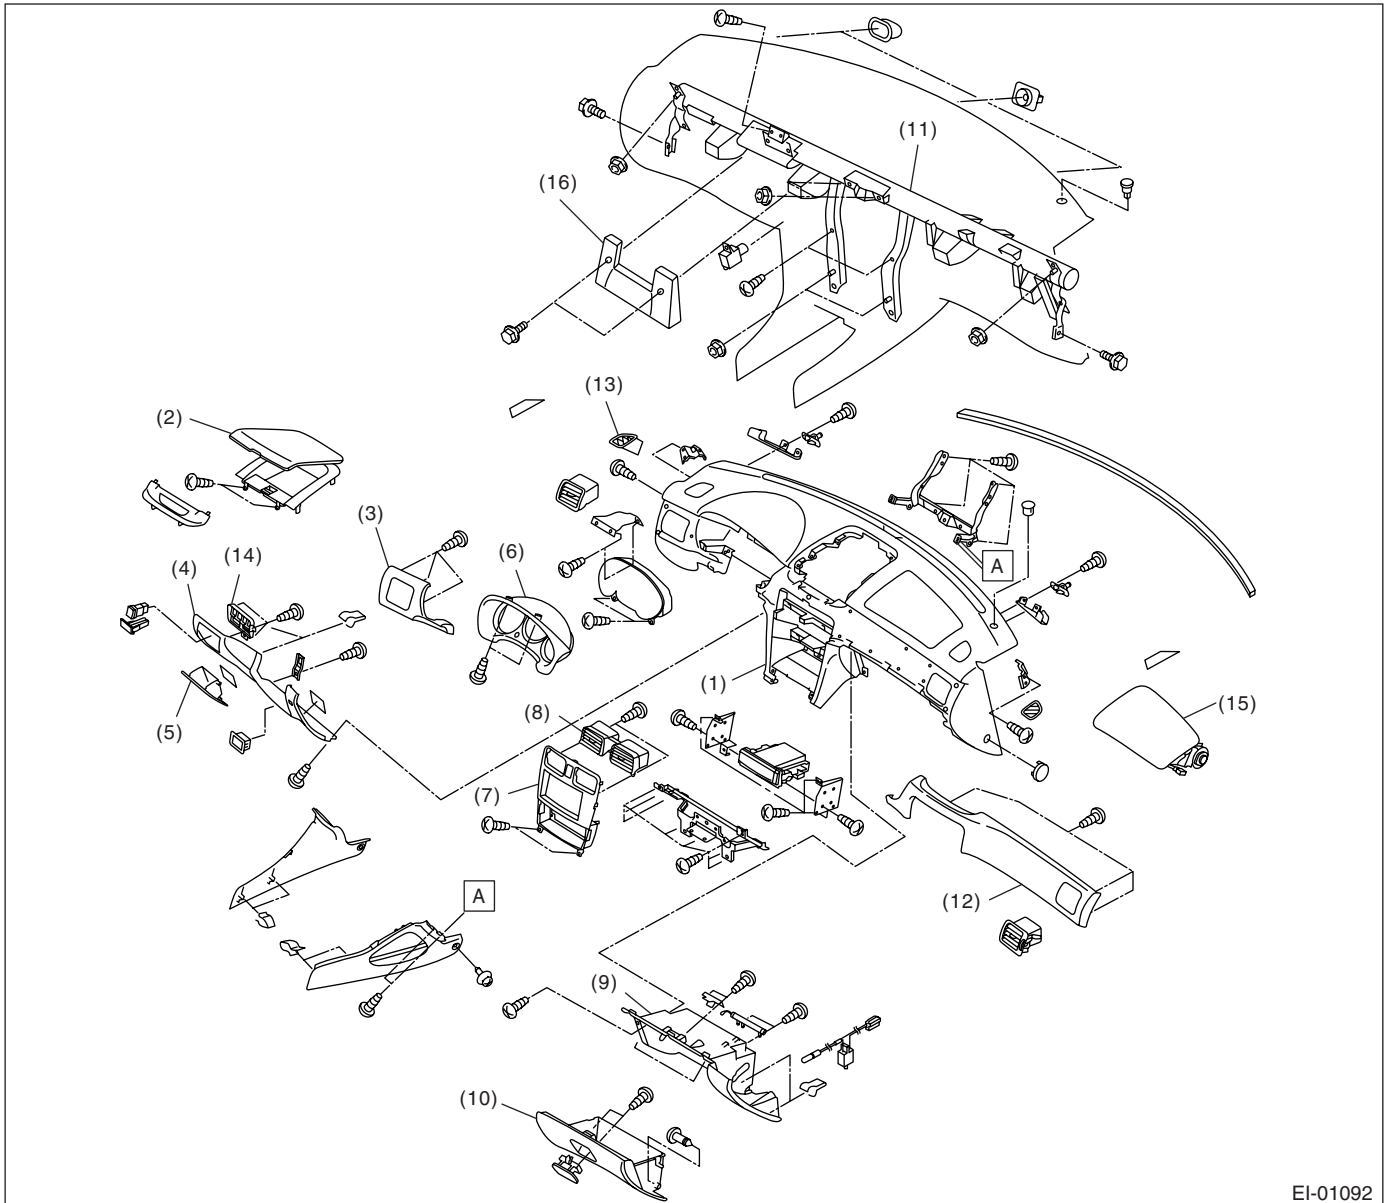


EI-01092

- | | | |
|--|---------------------|----------------------------------|
| (1) Pad & frame | (6) Meter visor | (12) Grille cover |
| (2) Center compartment (Model without navigation system) | (7) Center panel | (13) Air vent grille (Defroster) |
| (3) Grille cover | (8) Air vent grille | (14) Switch panel |
| (4) Lower cover | (9) Glove box panel | (15) Passenger's airbag module |
| (5) Coin box | (10) Glove box lid | (16) Knee guard panel |
| | (11) Steering beam | |

General Description

EXTERIOR/INTERIOR TRIM

13.INNER TRIM

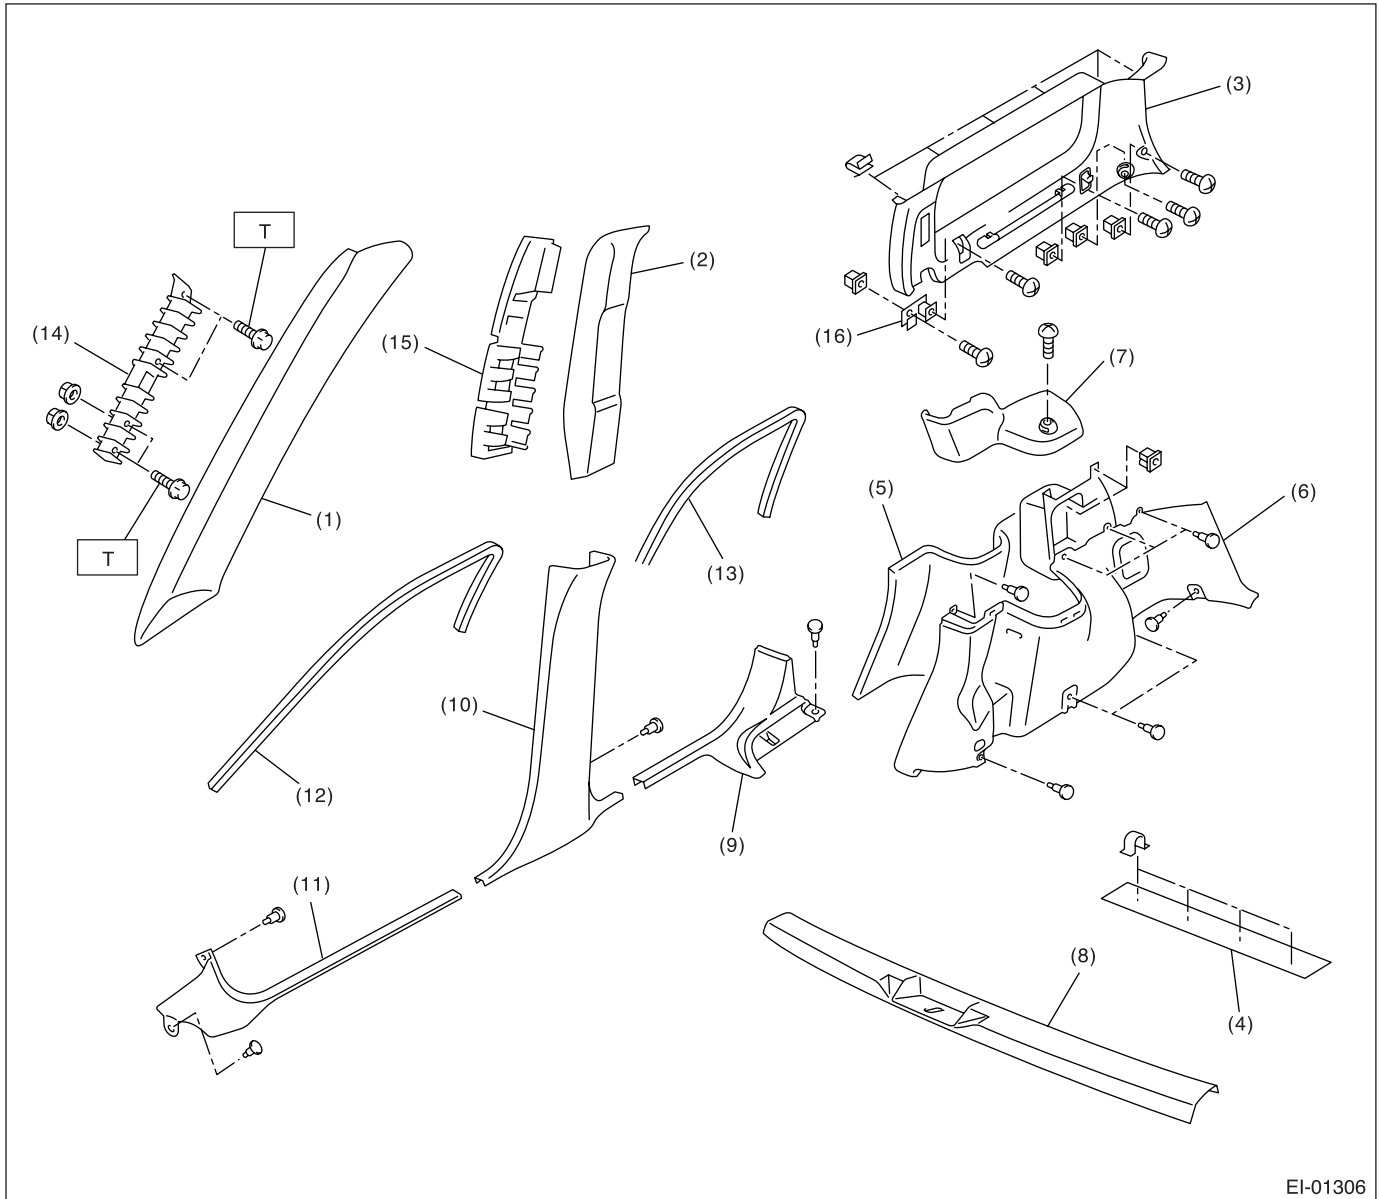


- (1) Front pillar upper trim
- (2) Center pillar upper trim
- (3) Rear pillar upper trim
- (4) Rear rail trim
- (5) Insulator
- (6) Rear quarter lower trim
- (7) Strut cap

- (8) Rear skirt trim
- (9) Side sill rear cover
- (10) Center pillar lower trim
- (11) Side sill front cover
- (12) Front garnish
- (13) Rear garnish


- (14) Front pillar inner rib
- (15) Center pillar inner rib
- (16) Bracket

Tightening torque: N·m (kgf-m, ft-lb)
T: 2 (0.20, 1.46)

14.ROOF TRIM

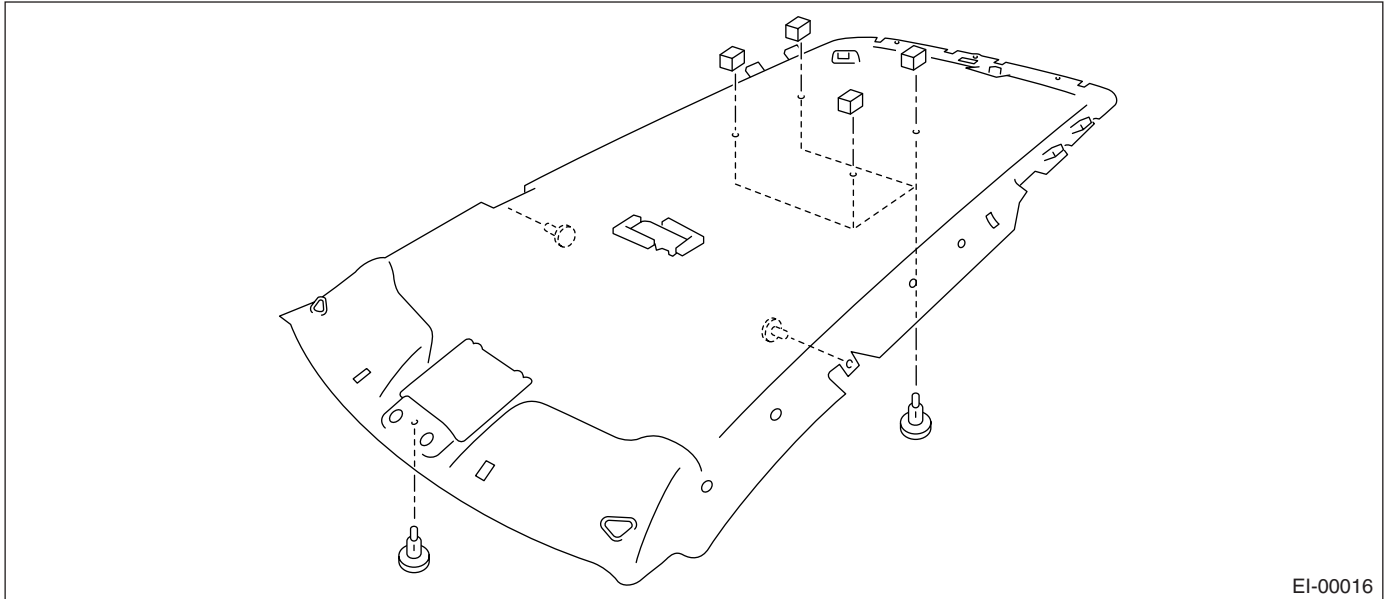

15.FLOOR MAT

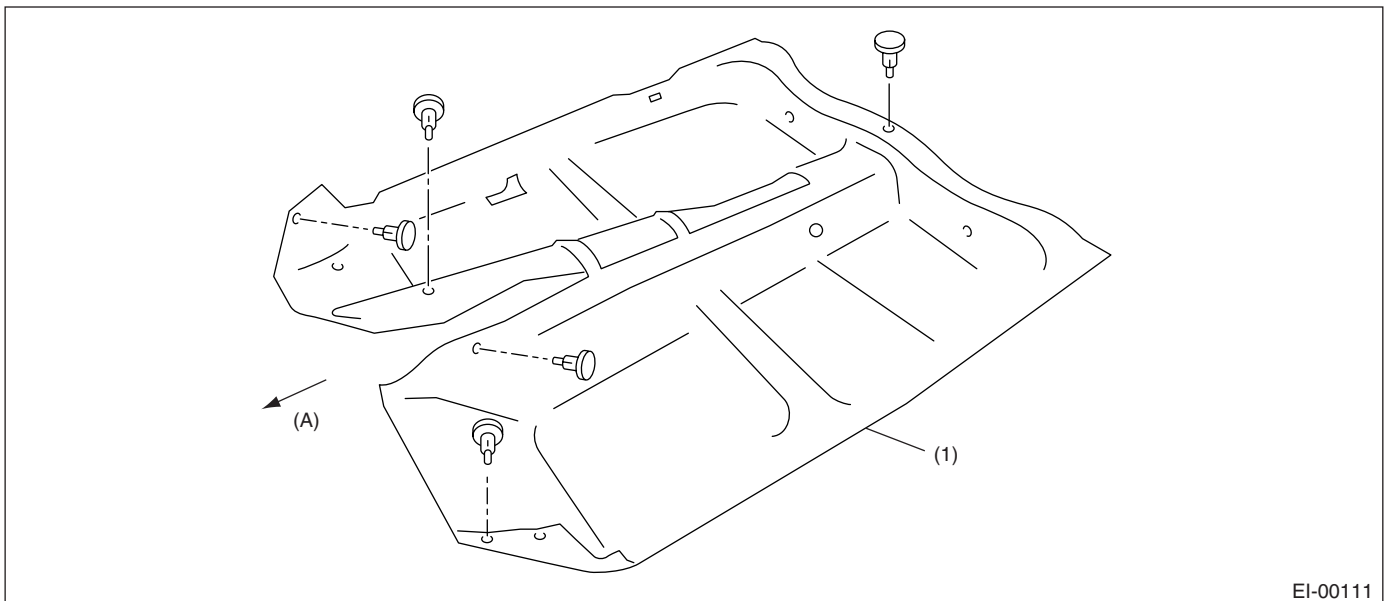


(A) Front side of vehicle

(1) Floor mat

General Description

EXTERIOR/INTERIOR TRIM

16.LUGGAGE FLOOR MAT

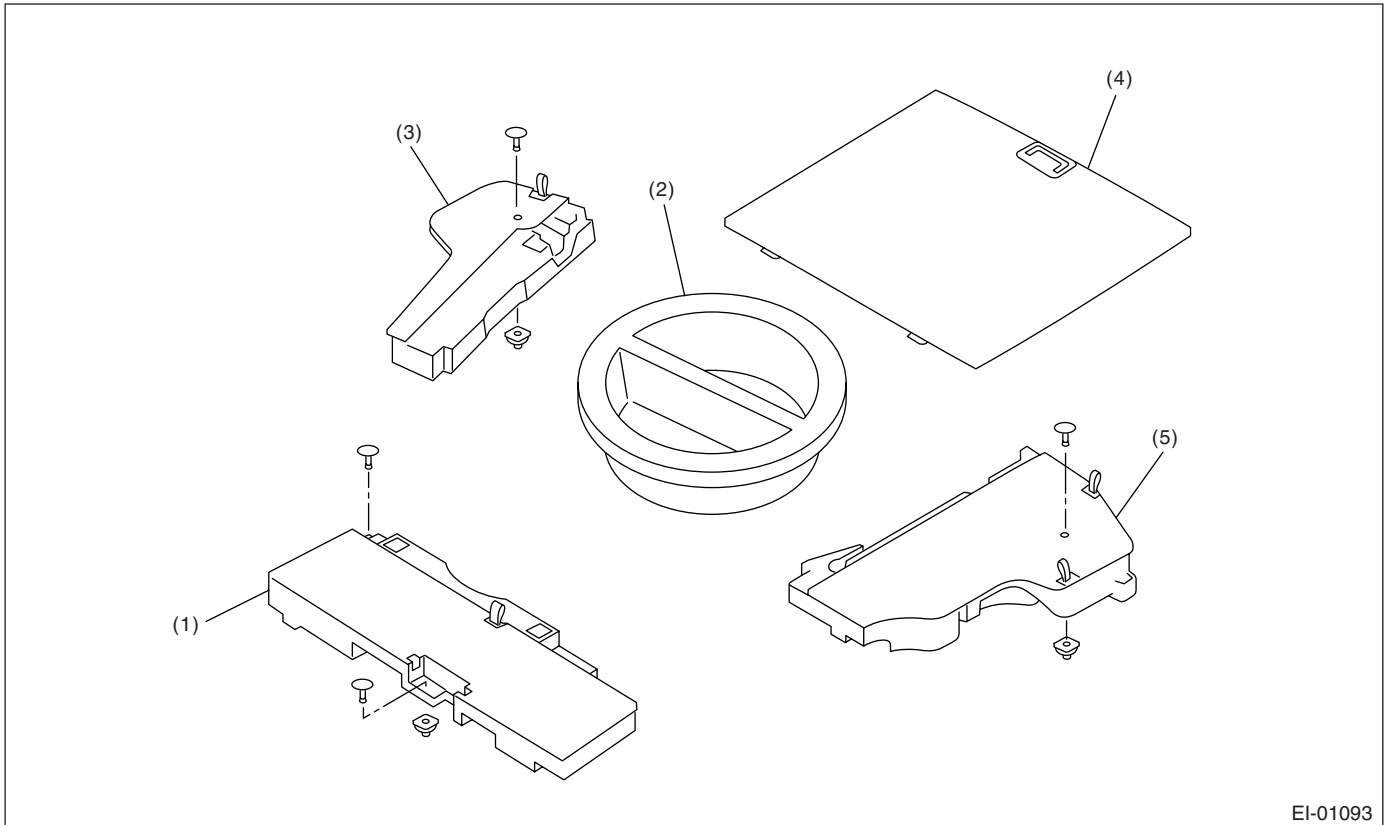


EI-01093

(1) Front floor mat
(2) Floor box

(3) Side floor mat RH
(4) Center floor mat

(5) Side floor mat LH

17.COMPARTMENT ACCESSORIES

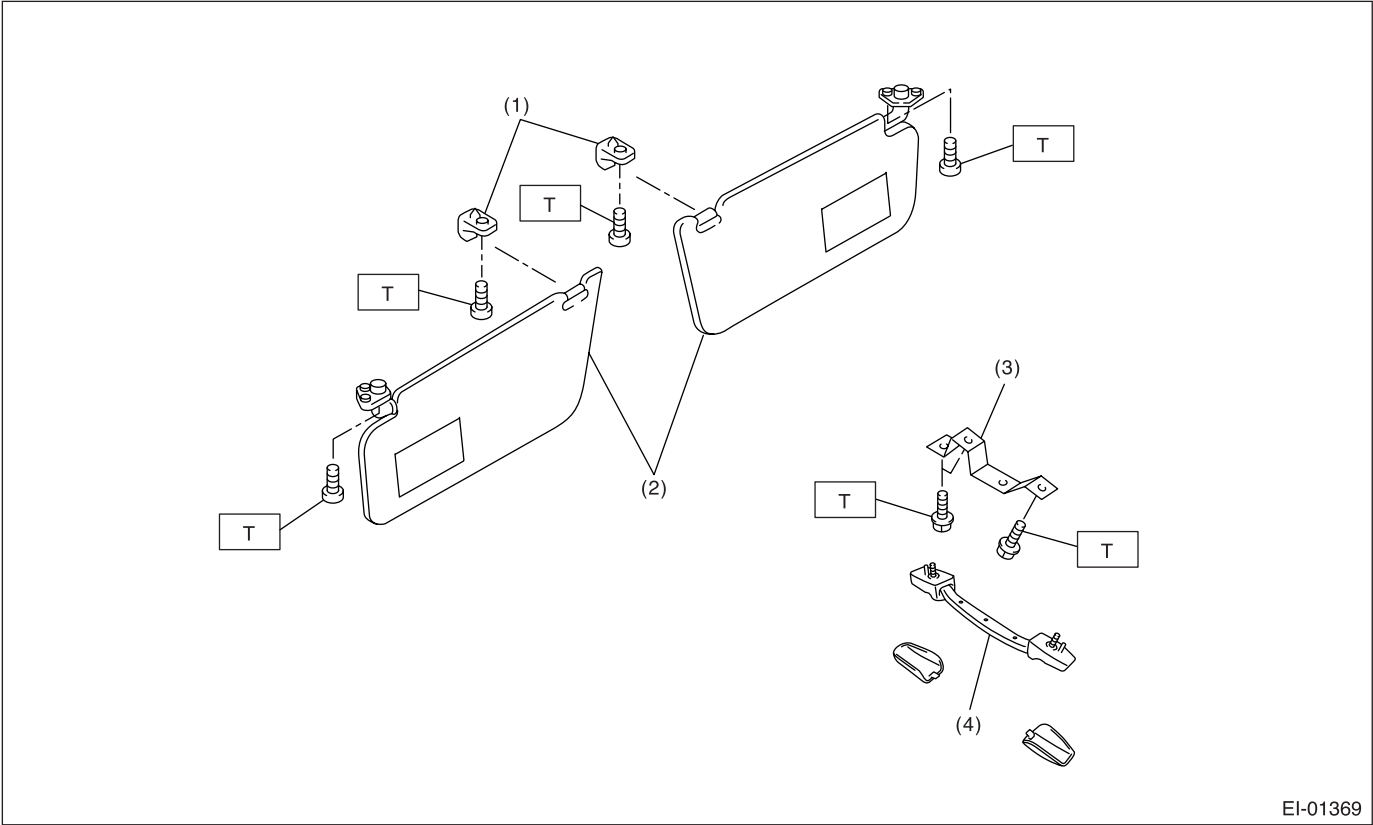

EI-01369

- (1) Hook
- (2) Sun Visor
- (3) Assist rail bracket
- (4) Assist grip (Retractable)

Tightening torque: N·m (kgf-m, ft-lb)
T: 2 (0.20, 1.46)

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim.
Clip clamp pliers	Used for removal of various clips and clamps.