


## 11.Front Door Trim

### A: REMOVAL


#### CAUTION:

**Do not apply excessive force to the clip. There is the possibility of the clip being damaged.**

- 1) Disconnect the ground cable from battery.
- 2) Remove the gusset cover.
- 3) Pull up the inner remote cover toward you to remove upper hook. Pull down the inner remote cover to remove lower hook. Remove the inner remote cover.

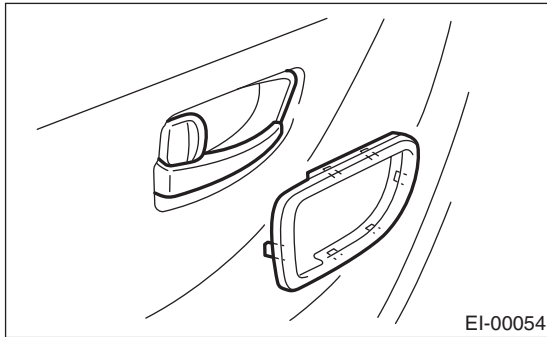

- 4) Remove the power window control switch. <Ref. to GW-8, REMOVAL, Power Window Control Switch.>
- 5) Remove the clips of trim panel using clip remover to remove the trim panel.

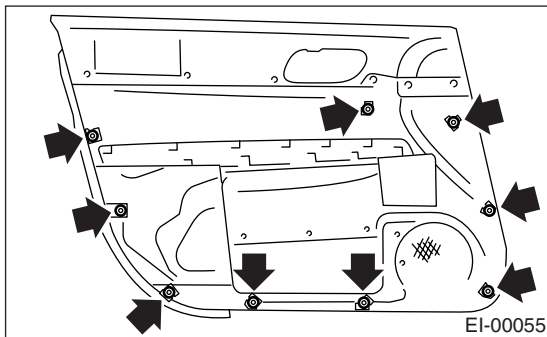

### B: INSTALLATION

Install in the reverse order of removal.