
16.Instrument Panel Assembly A: REMOVAL

CAUTION:

- All airbag system wiring harnesses and connectors are colored yellow. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system harness when servicing the instrument panel.

1. REMOVING ONLY THE INSTRUMENT PANEL

- 1) Disconnect the ground cable from battery.
- 2) Loosen the screws to remove lower cover.

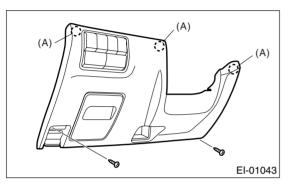


(A) Clip


- 3) Disconnect the in-vehicle sensor hose and connector.
- 4) Remove the console front cover and console cover. <Ref. to EI-37, REMOVAL, Console Box.>
- 5) Affix the thick protective tape (A) to the instrument panel pad to protect the surface.

NOTE:

Affix the protective tape so that it covers the vertical wall in the back of the gap between the panel center and the pad.

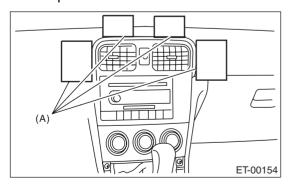


6) Remove the screws.

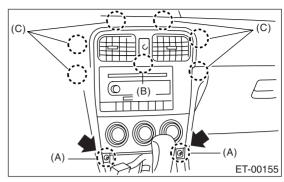

- (A) Screw
- (B) Clip
- (C) Claw
- 7) While pulling on the lower portion of the center console panel, insert a flat tip screwdriver into the portion (A) to remove the claw.

CAUTION:


Be very careful because it is possible to damage the instrument panel if the flat tip screw-driver is inserted into any other area than specified.

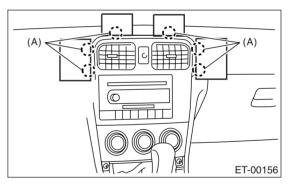


(A) Position for inserting the flat tip screwdriver


8) Disconnect the A/C control panel and hazard switch connectors.

9) Remove the screws and clips to remove the side console panel.

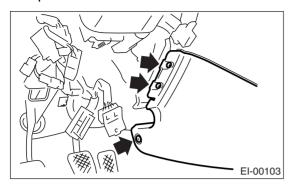

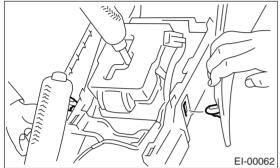

- 10) Remove the passenger airbag module. <Ref. to AB-14, REMOVAL, Passenger's Airbag Module.>
- 11) Remove the two bolts which secure steering column. <Ref. to PS-16, REMOVAL, Tilt Steering Column.>
- 12) Loosen the four bolts that secure the instrument panel. (The lower bolt should not be removed as it is used for alignment.)

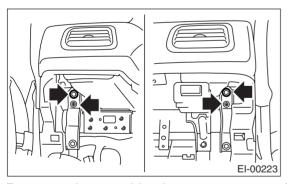

- 13) Remove the combination meter assembly. <Ref. to IDI-10, REMOVAL, Combination Meter.>
- 14) Loosen the instrument panel attaching screws.
- 15) Remove the instrument panel center compartment. <Ref. to EI-49, REMOVAL, Instrument Panel Center Compartment.>
- 16) Remove the radio. <Ref. to ET-6, REMOVAL, Radio Body.>
- 17) Remove the instrument panel side cover (both sides), the loosen the two bolts.

18) Remove the instrument panel assembly.

NOTE:


Remove the front pillar upper trim as required. <Ref. to El-41, REMOVAL, Upper Inner Trim.> 19) Disconnect the combination meter harness connector.

CAUTION:


Do not pull the harness when disconnecting connector.

2. REMOVAL OF INSTRUMENT PANEL WITH THE STEERING BEAM


- 1) Disconnect the ground cable from battery.
- 2) Loosen the screws and clips (A) to remove the lower cover.

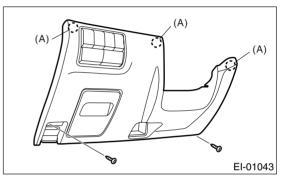

3) Remove the console front cover and console cover. <Ref. to EI-37, REMOVAL, Console Box.>
4) Loosen the screws and clip to remove the side console panel.

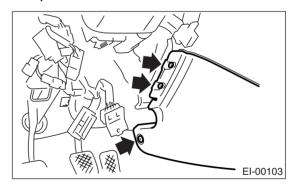

- 5) Remove the steering column.
- 6) Loosen the four bolts that secure the instrument panel.

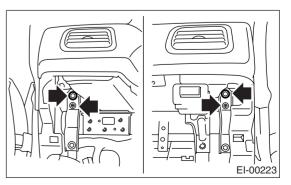


- 7) Remove the driver's and passenger's side airbag modules. <Ref. to AB-13, REMOVAL, Driver's Airbag Module.> <Ref. to AB-14, REMOVAL, Passenger's Airbag Module.>
- 8) Loosen the steering beam bolts.
- 9) Loosen the brake pedal attaching bolts. <Ref. to BR-48, REMOVAL, Brake Pedal.>
- 10) Remove the two clips on the leading end of the instrument panel assembly.
- 11) Remove the instrument panel assembly.

CAUTION:

Do not pull the harness when disconnecting connector.

NOTE:

- If necessary, make matching marks for easy reassembly.
- When storing the removed instrument panel, place it standing up on the floor.

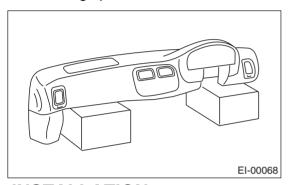

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

- Be careful not to snag the harness.
- Make sure to connect the harness connector.

NOTE:

When setting the instrument panel into position, push the hook into grommet (A) on the body panel.

