


## 17.Upper Inner Trim

### A: REMOVAL

- 1) Remove the lower inner trim. <Ref. to EI-42, REMOVAL, Lower Inner Trim.>
- 2) Remove the front moulding (A).
- 3) Remove the front pillar upper trim (B).
- 4) Detach the front seat belt shoulder anchor, then remove the center pillar upper trim (C).

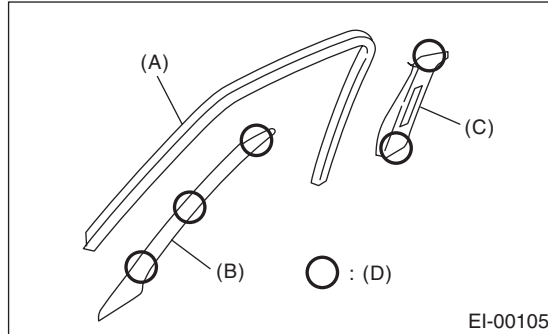

(D) Clip

### B: INSTALLATION


Install in the reverse order of removal.

#### CAUTION:

**Be sure to securely hook claws of inner trim panel to body flange.**

#### NOTE:

When installing the center pillar upper trim and the front pillar upper trim, be sure to set the front moulding as shown in figure.

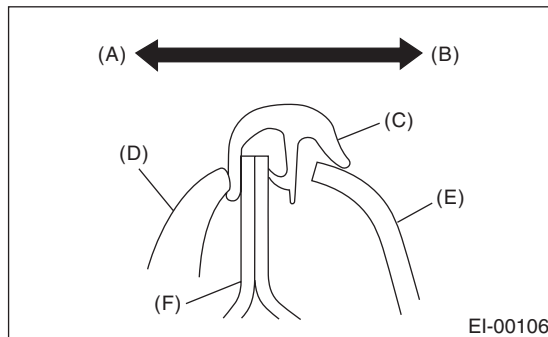

- (A) Outside
- (B) Inside
- (C) Molding
- (D) Weather strip
- (E) Trim
- (F) Body