


24.Luggage Floor Mat

A: REMOVAL

- 1) Remove the backside mat from the rear seat backrest.
- 2) Remove the clips, then detach the rear floor mats and boxes.

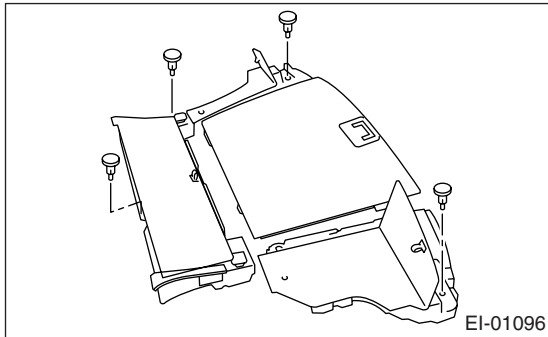

B: INSTALLATION

Install in the reverse order of removal.