


26.Heat Shield Cover

A: REMOVAL

1. CENTER HEAT SHIELD COVER


Loosen four bolts to remove the center heat shield cover.

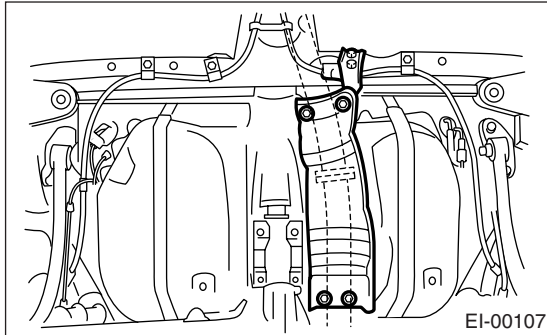

2. REAR HEAT SHIELD COVER

1) Remove the muffler. <Ref. to EX(H4SO)-9, REMOVAL, Muffler.>

2) Loosen the four bolts to remove the rear heat shield cover.

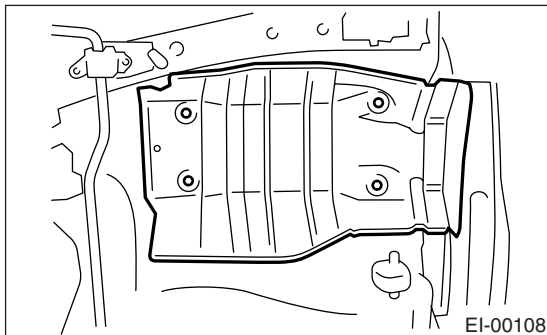

B: INSTALLATION

Install in the reverse order of removal.

EXTERIOR BODY PANELS

EB

	Page
1. General Description	2
2. Front Hood	9
3. Front Fender	10
4. Front Door	11
5. Front Sealing Cover	13
6. Rear Door	14
7. Rear Sealing Cover	16
8. Rear Gate	17
9. Rear Gate Garnish	20