



6. Rear Bumper

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the bolts and clips.

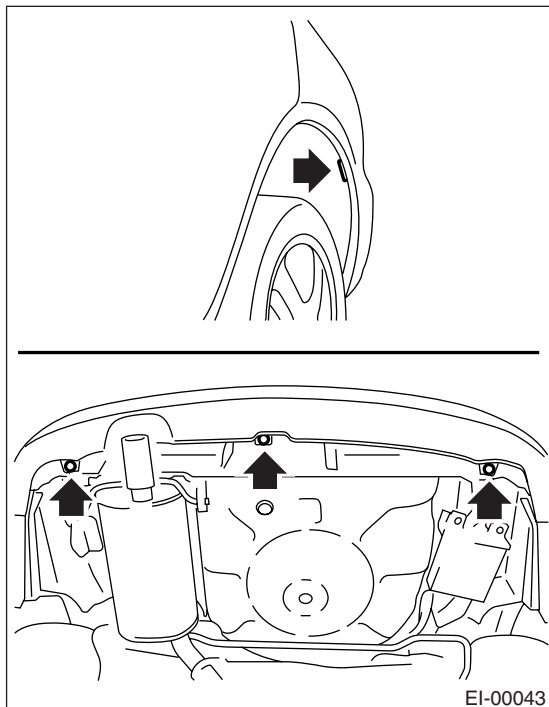

- 3) Remove the clips from the bumper and bracket.

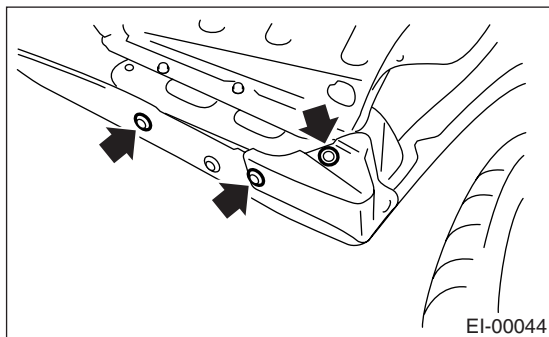


- 4) When removing the rear bumper beam assembly, remove the six bolts from bumper stay.

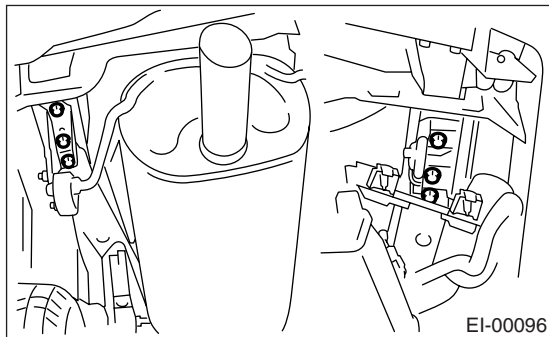


- 5) Remove the rear combination light assembly on both sides. <Ref. to LI-21, REMOVAL, Rear Combination Light Assembly.>

- 6) Remove the two clips on both sides.

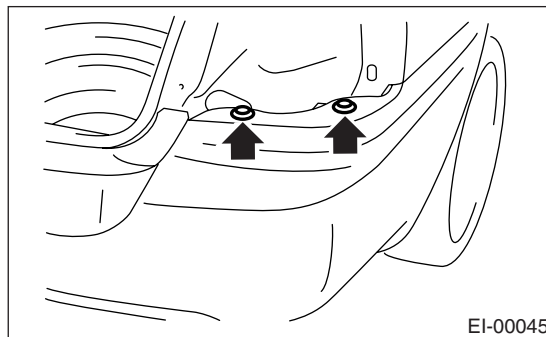


- 7) Remove the floor box.
- 8) Remove the rear skirt trim.
- 9) Loosen four nuts to remove the rear bumper.

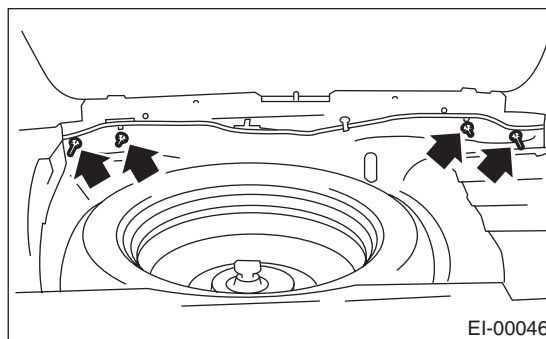


NOTE:

Rear bumper beam assembly is heavy. When removing the rear bumper beam assembly, two persons are necessary to do the work.

- 10) Remove the bolts, and then remove the bracket from bumper.

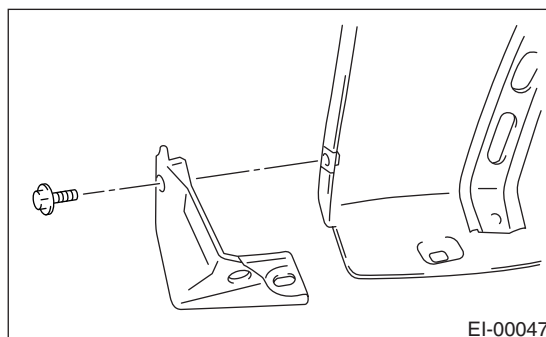


- 11) Remove the clips to remove the bumper upper beam.

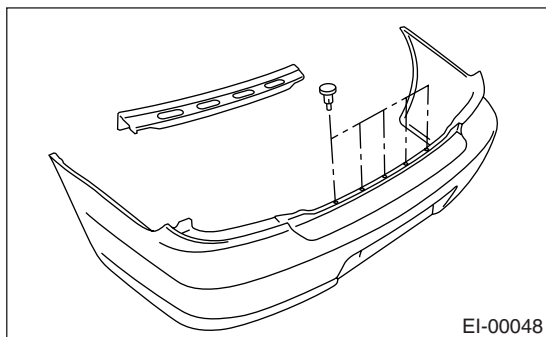

Rear Bumper

EXTERIOR/INTERIOR TRIM

12) Remove the four bolts, and then remove the side bracket and bumper stay.

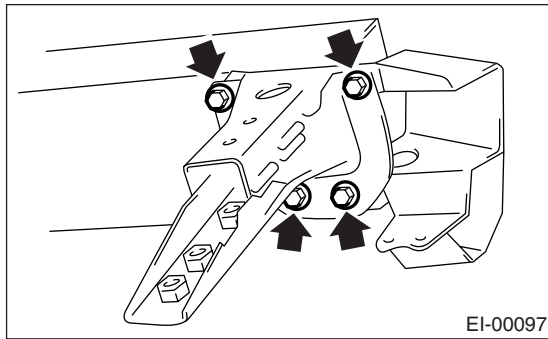

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”.

<Ref. to EI-4, REAR BUMPER, COMPONENT, General Description.>

C: REPAIR

Refer to front bumper repair. <Ref. to EI-21, REMOVAL, Front Bumper.>