



## 12. Rear Door Regulator and Motor Assembly

### A: REMOVAL

- 1) Remove the rear door glass. <Ref. to GW-22, REMOVAL, Rear Door Glass.>
- 2) Remove the front sash.
- 3) Disconnect the motor connector.
- 4) Loosen four bolts and two nuts to remove regulator assembly.

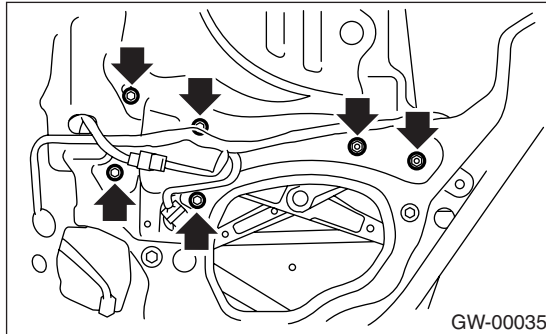

- 5) Loosen screws to remove motor assembly.

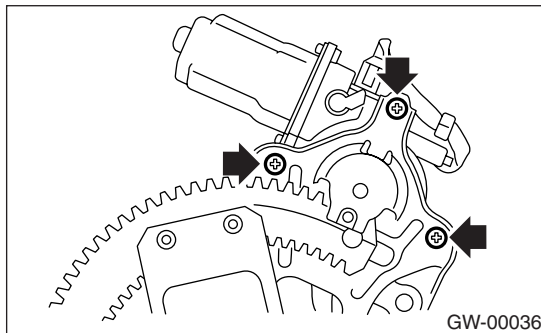

### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the rear door glass. <Ref. to GW-23, ADJUSTMENT, Rear Door Glass.>

#### **Tightening torque:**

**Refer to “COMPONENT” of “General Description”. <Ref. to GW-4, REAR DOOR GLASS, COMPONENT, General Description.>**

### C: INSPECTION

- 1) Make sure that the power window motor rotates properly when the battery voltage is applied to the terminals of motor connector.
- 2) Change polarity of battery connection to terminals to ensure that the motor rotates in reverse direction.