


14.Rearview Mirror

A: REMOVAL


NOTE:

Never reuse the spring. Prepare a new spring before removal.

1) Turn the mirror base 90° clockwise or counter-clockwise to remove it.

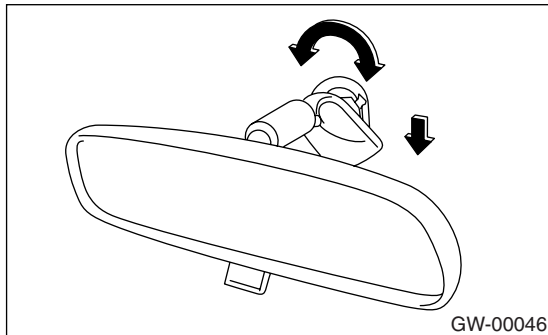

2) Remove the spring from the mirror base.

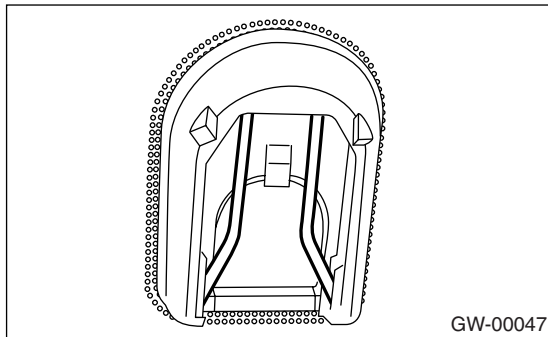

CAUTION:

Be careful not to damage the mirror surface.

3) When the mirror base is damaged, use the piano wire or spatula to remove.

CAUTION:

Be careful not to damage the windshield glass.

B: INSTALLATION

1) When the mirror base is removed, clean the old adhesive, and align the windshield glass mark to install.

Adhesive:

REPAIR KIT IN MR (Part No. 65029FC000)

2) Make sure the mirror base is securely attached and then install the spring to it.

3) Install in the reverse order of removal.

C: INSPECTION

Check that the mirror is not damaged.

Check that the spring is not damaged.