16.Rear Window Defogger System

A: WIRING DIAGRAM

1. REAR WINDOW DEFOGGER

<Ref. to WI-147, WIRING DIAGRAM, Rear Defogger System.>

B: INSPECTION

Symptom	Repair order
Rear window defogger does not operate.	1. Fuse (M/B No. 1) (F/B No. 17)
	2. Rear defogger relay
	3. Rear defogger timer
	4. Defogger switch
	5. Rear defogger condenser
	6. Deffogger wire
	7. Wiring harness