


# Control Unit

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

## 10. Control Unit

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) For manual A/C, remove the mode cable and air mix cable from the each link of the heater unit.
- 3) Remove the console front cover.

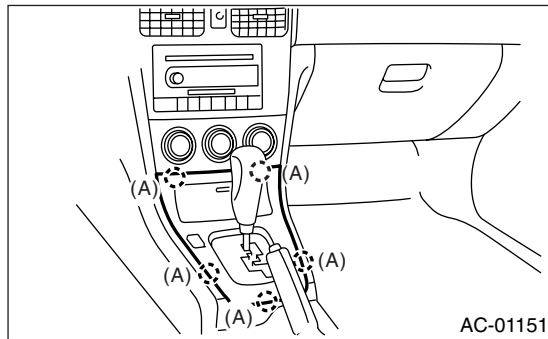


(A) Hook


- 4) Affix the thick protective tape (A) to the instrument panel pad to protect the surface.

#### NOTE:

Affix the protective tape so that it covers the vertical wall in the back of the gap between the panel center and the pad.

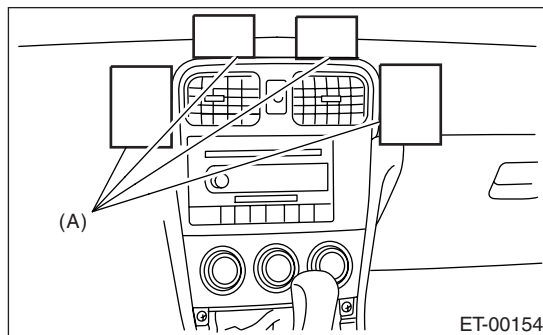

- 5) Remove the screws.

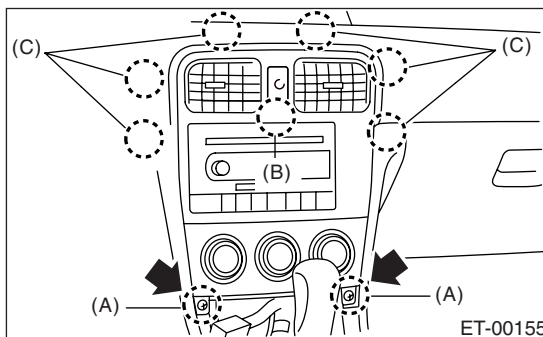


- (A) Screw
- (B) Clip
- (C) Claw

- 6) While pulling on the lower portion of the center console panel, insert a flat tip screwdriver into the portion (A) to remove the claw.

#### CAUTION:

Be very careful because it is possible to damage the instrument panel if the flat tip screwdriver is inserted into any other area than specified.

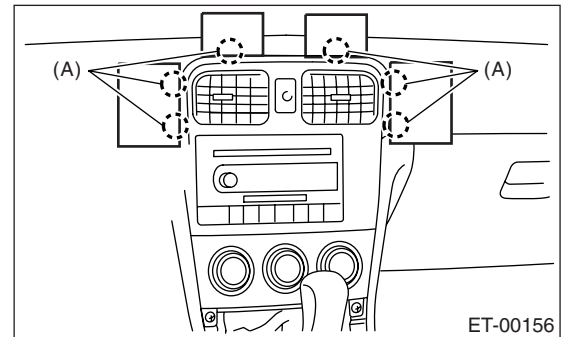

(A) Position for inserting the flat tip screwdriver

- 7) Loosen the four screws on the backside of the center console panel and remove the control unit.

### B: INSTALLATION

Install in the reverse order of removal.