

## 6. Compressor Oil

### A: PROCEDURE

**NOTE:**

Before making repairs, conduct the oil return operation to return the compressor oil to the compressor in circulation with the refrigerant.

- 1) Increase the engine to 1,500 rpm.
- 2) Turn on the A/C switch.
- 3) Turn the temperature control switch to MAX COOL.
- 4) Put in RECIRC position.
- 5) Turn the blower control switch to HI.
- 6) Leave in this condition for 10 minutes.

### B: REPLACEMENT

**NOTE:**

- After replacing the component, add an appropriate amount of compressor oil.
- When replacing the compressor, the new compressor will already have the specified amount of oil in it. Install the new compressor after removing the same amount of oil that is remaining in the compressor removed.

Replacement parts	Amount of oil replenishment
Evaporator	Approximately 50 cm <sup>3</sup> (1.7 US fl oz, 1.8 Imp fl oz)
Condenser	Approximately 30 cm <sup>3</sup> (1.0 US fl oz, 1.1 Imp fl oz)
Hose layout	Approximately 10 cm <sup>3</sup> (0.4 US fl oz, 0.4 Imp fl oz)
Receiver drier	Approximately 10 cm <sup>3</sup> (0.4 US fl oz, 0.4 Imp fl oz)