1. Basic Diagnostic Procedure

A: PROCEDURE

	Step	Check	Yes	No
1	CATOR LIGHT. 1) Turn the ignition switch to OFF or ACC position. 2) Wait at least 60 seconds.	Does the security indicator light blink?	Go to step 2.	Check the security indicator light circuit. <ref. chart="" check="" circuit,="" diagnostics="" for="" im(diag)-10,="" indicator="" inspection,="" light="" light.="" security="" to=""></ref.>
2	CHECK ILLUMINATION OF SECURITY INDI- CATOR LIGHT. Remove the key from ignition switch.	Does the security indicator light begin to blink within 1 second after the key is removed?	Go to step 3.	Check the key switch circuit. <ref. 12,="" chart="" check="" cir-="" cuit,="" diagnostics="" for="" im(diag)-="" indicator="" inspec-="" key="" light.="" security="" switch="" tion,="" to=""></ref.>
3	CHECK ENGINE START. Turn the ignition switch to the START position.	Does the engine start?	Go to step 4.	Go to step 5.
4	CHECK ILLUMINATION OF SECURITY INDI- CATOR LIGHT. Turn the ignition switch to ON.	Does the security indicator light illuminate?	Check the security indicator light circuit. <ref. chart="" check="" circuit,="" diagnostics="" for="" im(diag)-10,="" indicator="" inspection,="" light="" light.="" security="" to=""></ref.>	Immobilizer system is normal.
6	CHECK INDICATION OF DTC ON SCREEN. 1) Turn the ignition switch to OFF. 2) Connect the Subaru Select Monitor to data link connector. <ref. im(diag)-7,="" monitor.="" select="" subaru="" to=""> 3) Turn the ignition switch and Subaru Select Monitor switch to ON. 4) Read any DTC on the display. PERFORM DIAGNOSIS. 1) Inspect using the "Diagnostic Procedure</ref.>	Are DTCs indicated on display? Are DTCs indicated on display?	Go to step 6. Inspect using the "Diagnostic Proce-	Repair the related parts. Finish the diagnosis.
	with Diagnostic Trouble Code (DTC)". <ref. (dtc).="" code="" diagnostic="" im(diag)-15,="" procedure="" to="" trouble="" with=""> 2) Repair the trouble cause. 3) Perform the Clear Memory Mode. 4) Read any DTC again.</ref.>	piay :	dure with Diagnostic Trouble Code (DTC)". <ref. (dtc).="" code="" diagnostic="" im(diag)-15,="" procedure="" to="" trouble="" with=""></ref.>	1313.