


### 19.Rear Turn Signal Light Bulb

#### A: REMOVAL

- 1) Remove the rear combination light assembly.  
<Ref. to LI-21, REMOVAL, Rear Combination Light Assembly.>
- 2) Turn the socket and remove the bulb.

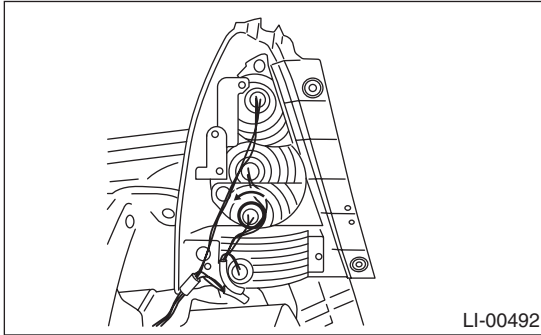

#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.  
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new one.