



23. Spot Map Light

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Insert a flat tip screwdriver into the notch on the lens and remove it by prying.

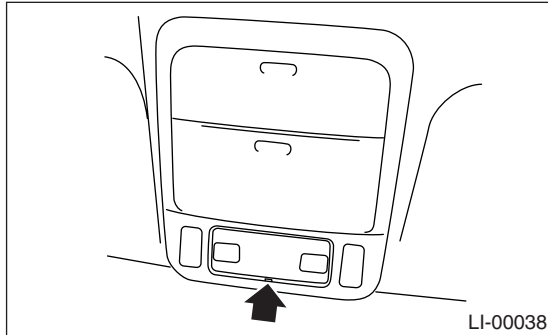

- 3) Remove the spot map light mounting screw.

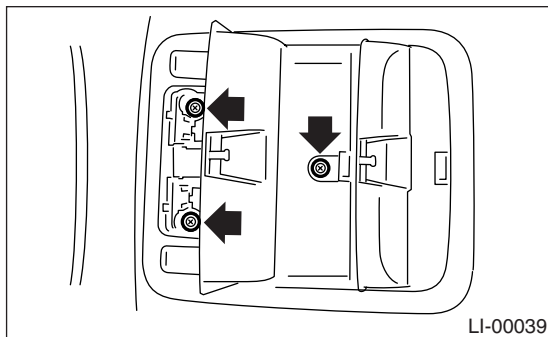

- 4) Disconnect the harness connectors and remove the spot map light.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. SPOT MAP LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new one.

2. SPOT MAP LIGHT SWITCH

Measure the spot map light switch resistance.

| Switch position | Terminal No. | Standard |
|-----------------|--------------|--------------|
| OFF | — | 1 MΩ or more |
| ON | 1 and 2 | 18±5.4 Ω |