

General Diagnostic Table

OCCUPANT DETECTION SYSTEM (DIAGNOSTICS)

14. General Diagnostic Table

A: INSPECTION

Symptom	Problem parts
Passenger's airbag ON/OFF indicator does not operate.	<ul style="list-style-type: none">• Load cell sensor is faulty.• Airbag ON/OFF indicator is faulty.• Install condition of passenger's seat is faulty.• Passenger's seat is damaged.• Damage for floor panel
Vehicle after collision	<ul style="list-style-type: none">• Passenger's seat is damaged.• Damage for floor panel• Occupant detection control module is damaged.• Load cell sensor damaged• Seat harness damaged• Buckle switch damaged
Airbag warning light comes on.	<ul style="list-style-type: none">• Combination meter is faulty.• Airbag control module is faulty.• Steering roll connector is faulty.• Each airbag module is faulty.
When installing the seat or seat articles	<ul style="list-style-type: none">• Passenger's seat is poor installation.• Passenger's seat is damaged.

OCCUPANT DETECTION SYSTEM (TYPE B) (DIAGNOSTICS)

OD(TYPE B)(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	4
4. Electrical Component Location	13
5. Airbag Connector	15
6. Control Module I/O Signal	16
7. Subaru Select Monitor	17
8. Read Diagnostic Trouble Code (DTC)	20
9. Inspection Mode	21
10. Clear Memory Mode	22
11. Airbag Warning Light Illumination Pattern	23
12. Passenger's Airbag ON/OFF Indicator Light Illumination Pattern	24
13. List of Diagnostic Trouble Code (DTC)	25
14. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	26