

## **Clear Memory Mode**

OCCUPANT DETECTION SYSTEM (TYPE B) (DIAGNOSTICS)

---

### **10. Clear Memory Mode**

#### **A: OPERATION**

Clear the memory in the following steps after the malfunction is repaired.

For details concerning DTC clear operation, refer to “Subaru Select Monitor”. <Ref. to AB(TYPE B)(diag)-29, Subaru Select Monitor.>