

## **Read Diagnostic Trouble Code (DTC)**

OCCUPANT DETECTION SYSTEM (TYPE B) (DIAGNOSTICS)

---

### **8. Read Diagnostic Trouble Code (DTC)**

#### **A: OPERATION**

For details about reading of DTCs, refer to “Subaru Select Monitor”. <Ref. to AB(TYPE B)(diag)-29, Subaru Select Monitor.>