


### 6. Rear Seat Belt


#### A: REMOVAL

##### 1. OUTER BELT RH AND LH


- 1) Remove the luggage floor mat. <Ref. to EI-48, REMOVAL, Luggage Floor Mat.>
- 2) Remove the rear seat. <Ref. to SE-19, REMOVAL, Rear Seat.>
- 3) Remove the rear quarter trim. <Ref. to EI-43, REMOVAL, Rear Quarter Trim.>
- 4) Remove the seat belt lower anchor bolt.

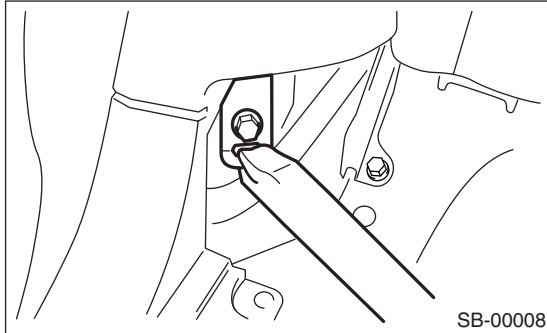


- 5) Remove the anchor cover. Remove the two bolts, and then remove the shoulder anchor from the pillar.

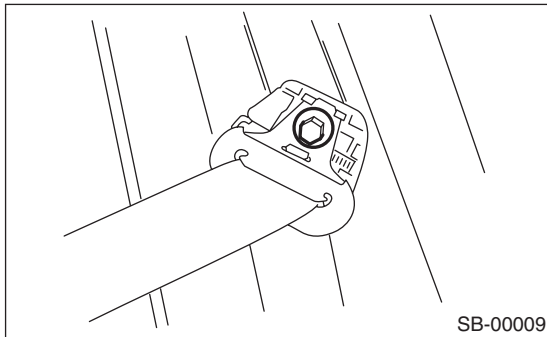

- 6) Remove the rear quarter trim. <Ref. to EI-43, REMOVAL, Rear Quarter Trim.>
- 7) Remove the bolts, and then detach the outer belt side.

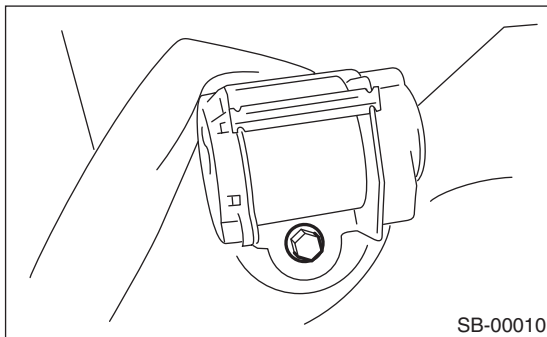


- 8) Remove the two bolts to remove the adjustable anchor assembly.

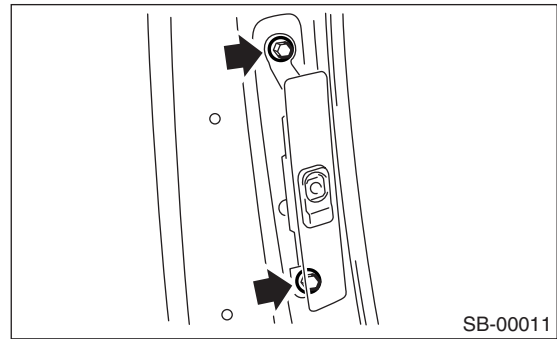


##### 2. OUTER SEAT BELT CENTER

- 1) Remove the anchor cover. Remove the bolt, and then remove the shoulder anchor from the pillar.

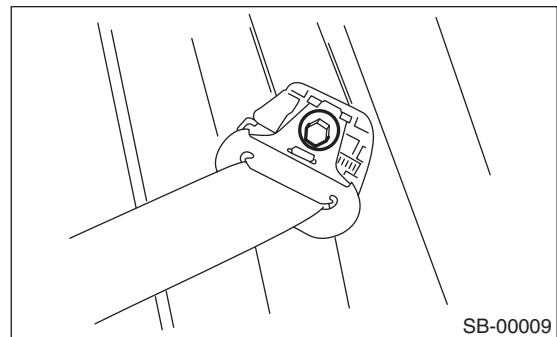

- 2) Remove the strut cap. <Ref. to EI-43, REMOVAL, Rear Quarter Trim.>
- 3) Remove the rear rail trim. <Ref. to EI-43, REMOVAL, Rear Quarter Trim.>
- 4) Remove the rear pillar upper trim. <Ref. to EI-43, REMOVAL, Rear Quarter Trim.>
- 5) Remove the rear skirt trim. <Ref. to EI-43, REMOVAL, Rear Quarter Trim.>
- 6) Remove the rear quarter lower trim. <Ref. to EI-43, REMOVAL, Rear Quarter Trim.>
- 7) Remove the snap lock carefully, and then remove the cover (B). Pull the outer seat belt center tongue (A) from the hole to one side of the trim.

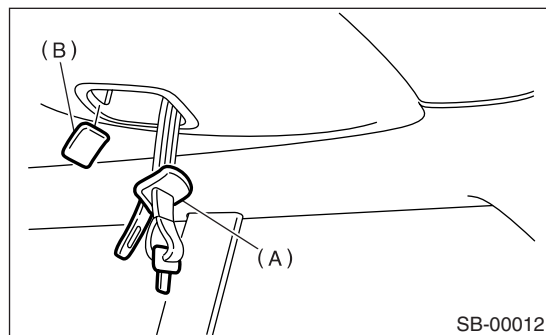


- 8) Remove the clips, and then hang the roof trim back end from the roof.

# Rear Seat Belt


## SEAT BELT SYSTEM

9) Disconnect the harness and connectors, and then remove the outer seat belt center assembly.

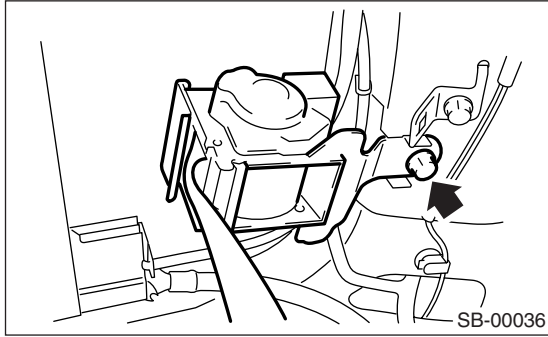

### 3. INNER BELT

- 1) Remove the rear cushion.
- 2) Remove the bolt, and then detach the inner belt.

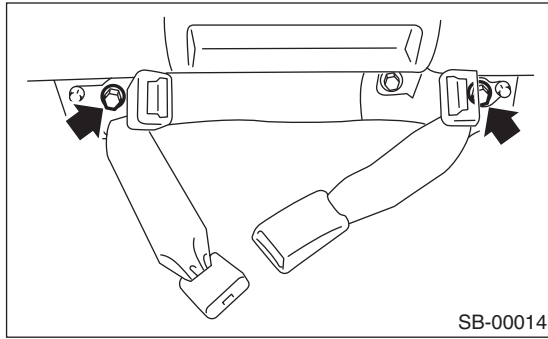

### B: INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

- During installation, make sure that the seat belts are not twisted.
- After installation, make sure that the seat belts are smoothly extended and wound.

#### Tightening torque:

<Ref. to SB-5, REAR SEAT BELT, COMPONENT, General Description.>

### C: INSPECTION

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent or worn.
- Seat belt is abnormally wound or extended.
- Inner belt is deformed or damaged.
- Seat belt buckle cannot be engaged properly.

# LIGHTING SYSTEM

# LI

---

|                                                    | Page |
|----------------------------------------------------|------|
| 1. General Description .....                       | 2    |
| 2. Headlight and Tail Light System .....           | 3    |
| 3. Front Fog Light System .....                    | 4    |
| 4. Turn Signal Light and Hazard Light System ..... | 5    |
| 5. Back-up Light System .....                      | 6    |
| 6. Stop Light System .....                         | 7    |
| 7. Room Light System .....                         | 8    |
| 8. Combination Switch (Light) .....                | 9    |
| 9. Headlight Assembly .....                        | 10   |
| 10. Headlight Bulb .....                           | 14   |
| 11. Front Turn Signal Light Bulb .....             | 16   |
| 12. Clearance/Parking Light Bulb .....             | 17   |
| 13. Front Side Marker Light Bulb .....             | 18   |
| 14. Front Fog Light Assembly .....                 | 19   |
| 15. Front Fog Light Bulb .....                     | 20   |
| 16. Rear Combination Light Assembly .....          | 21   |
| 17. Tail/Stop Light Bulb .....                     | 22   |
| 18. Back-up Light Bulb .....                       | 23   |
| 19. Rear Turn Signal Light Bulb .....              | 24   |
| 20. License Plate Light .....                      | 25   |
| 21. High-mounted Stop Light .....                  | 26   |
| 22. Side Turn Signal Light Assembly .....          | 27   |
| 23. Spot Map Light .....                           | 28   |
| 24. Room Light .....                               | 29   |
| 25. Luggage Room Light .....                       | 30   |