


4. Seat Heater System

A: REMOVAL

1. SEAT HEATER UNIT

- 1) Remove the front seats. <Ref. to SE-8, REMOVAL, Front Seat.>
- 2) Remove the backrest cover of front seat and seat cushion cover. <Ref. to SE-11, DISASSEMBLY, Front Seat.>
- 3) Remove the hog rings, and then remove the seat heater unit.

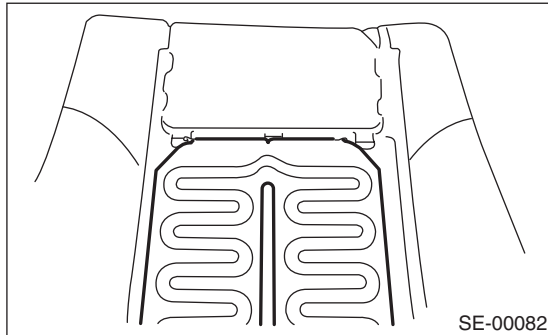

2. SEAT HEATER SWITCH

- 1) Remove the console box. <Ref. to EI-37, REMOVAL, Console Box.>
- 2) Remove the seat heater switch from the console box.

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. WIRING DIAGRAM

<Ref. to WI-109, WIRING DIAGRAM, Seat Heater System.>

2. SEAT HEATER UNIT

Disconnect the seat heater unit connector, and check the continuity between terminals of connector.

Connector & terminal LHD side seat (R188)

No. 2 — No. 6:

No. 2 — No. 7:


No. 6 — No. 7:

RHD side seat (R41)

No. 1 — No. 3:

No. 1 — No. 4:

No. 3 — No. 4:

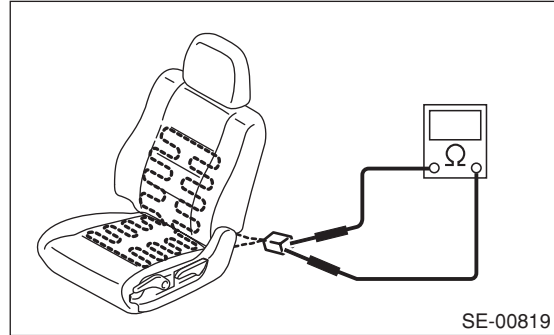

If no continuity exists, replace the seat heater unit with a new part.

3. SEAT HEATER SWITCH

• CHECK THERMISTOR OUTPUT VOLTAGE

- 1) Connect the battery to the connector.

Connector terminals No. 2 (+):

- 2) Measure the voltage between connector and chassis ground.

Connector & terminal:

LHD side seat

(R43) No. 4 (+) — Chassis ground (—):

RHD side seat

(R42) No. 4 (+) — Chassis ground (—):

If voltage is not 1.5 V or more, replace the seat heater switch.

• CHECK SWITCH OUTPUT VOLTAGE

- 1) Connect the battery to the connector.

Connector terminals No. 2 (+):

- 2) Measure the voltage between connector and chassis ground while turning the switch to ON.

Connector & terminal:

LHD side seat

(R43) No. 3 (+) — Chassis ground (—):

RHD side seat

(R42) No. 3 (+) — Chassis ground (—):

If voltage does not change from 10 V or more to zero, replace the seat heater switch.

Seat Heater System

SEATS

SECURITY AND LOCKS

SL

	Page
1. General Description	2
2. Door Lock Control System	8
3. Keyless Entry System	11
4. Security System	22
5. Front Inner Remote	29
6. Front Outer Handle	30
7. Front Door Latch and Door Lock Actuator Assembly	31
8. Front Door Lock Actuator	32
9. Rear Inner Remote	33
10. Rear Outer Handle	34
11. Rear Door Latch and Door Lock Actuator Assembly	35
12. Rear Door Lock Actuator	36
13. Rear Gate Outer Handle	37
14. Rear Gate Latch Assembly	38
15. Rear Gate Latch Lock Actuator	39
16. Front Hood Lock Assembly	40
17. Remote Openers	41
18. Ignition Key Lock	42
19. Key Lock Cylinders	43
20. Security Control Unit	44
21. Impact Sensor	47
22. Interrupt Relay	48
23. Keyless Entry Control Module	49
24. Body Integrated Unit	50
25. Keyless Transmitter	51
26. Immobilizer Control Module	53
27. Immobilizer Antenna	54