


## 11. Rear Door Latch and Door Lock Actuator Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear door trim. <Ref. to EI-34, REMOVAL, Rear Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 4) Remove the rear inner remote. <Ref. to SL-33, REMOVAL, Rear Inner Remote.>
- 5) Remove the three screws and one bolt.

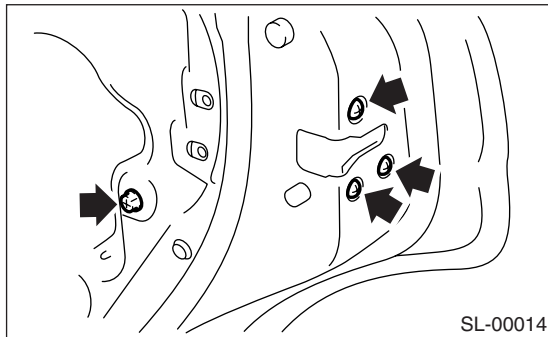

- 6) Disconnect the connector and then detach the rear door latch assembly.

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**Door latch mounting screw**

**6.5 N·m (0.66 kgf-m, 4.8 ft-lb)**

**Door lock actuator mounting bolt**

**7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

#### **NOTE:**

Make sure the lock works properly after installation.

### C: INSPECTION

- 1) Make sure the cable is not deformed.
- 2) Make sure the lever and cable move smoothly.