


22. Interrupt Relay

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Assembly.>
- 3) Remove the mounting bolt and detach the interrupt relay (Tightened together with the fuse & relay box bracket).

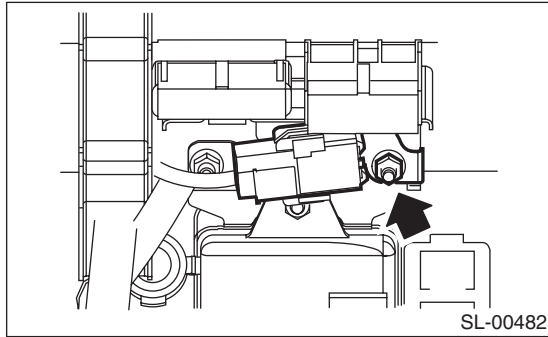


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the interrupt relay resistance between terminals (indicated in the table below) when connecting terminal No. 3 to battery positive terminal and terminal No. 1 to battery ground terminal.

Current	Terminal No.	Standard
Flow	5 — 2	1 M Ω or more
	5 — 4	Less than 1 Ω
No flow	5 — 2	Less than 1 Ω
	5 — 4	1 M Ω or more

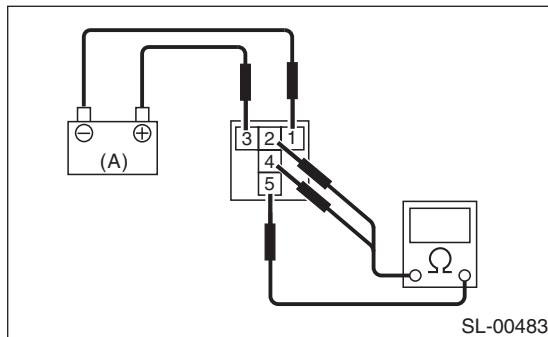

(A) Battery

If NG, replace the interrupt relay.