

### 6. Front Outer Handle

#### A: REMOVAL

1) Remove the door trim. <Ref. to EI-33, REMOVAL, Front Door Trim.>

##### CAUTION:

**Do not apply excessive force to remove the door trim. This can deform the door panel.**

2) Remove the sealing cover. <Ref. to EB-13, REMOVAL, Front Sealing Cover.>


3) Remove the front inner remote. <Ref. to SL-29, REMOVAL, Front Inner Remote.>

4) Remove the cable from the cable holder and allow it to be free.

5) Remove the two bolts and the rod clamp to remove front outer handle.

##### NOTE:

The rear side bolt can be removed from the inner panel service hole (A) by adjusting the glass position.

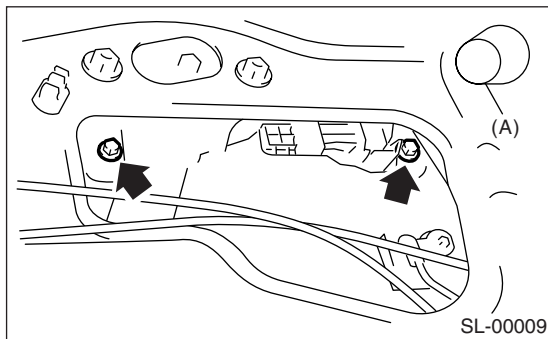

#### B: INSTALLATION

Install in the reverse order of removal.

##### ***Tightening torque:***

***7.5 N·m (0.76 kgf-m, 5.5 ft-lb)***

##### NOTE:

Make sure the outer handle works properly after installation.

#### C: INSPECTION

1) Make sure the rod is not deformed.

2) Make sure the lever and rod move smoothly.