


## 9. Rear Inner Remote

### A: REMOVAL

- 1) Remove the rear door trim. <Ref. to EI-34, REMOVAL, Rear Door Trim.>
- 2) Remove the sealing cover. <Ref. to EB-16, REMOVAL, Rear Sealing Cover.>
- 3) Remove the one screw and two cables.
- 4) Remove the inner remote.

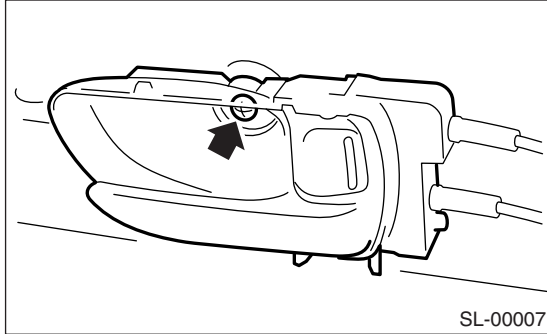

### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

***1.5 N·m (0.15 kgf-m, 1.1 ft-lb)***

#### **NOTE:**

Make sure the inner remote works properly after installation.

### C: INSPECTION

- 1) Make sure the cable is not deformed.
- 2) Make sure the lever and cable move smoothly.
- 3) Make sure that the rear door child safety locks operate properly.

#### **NOTE:**

If the remote handle is a chrome plated type, check that there is plenty of grease applied to the cable joint of the remote handle.

If there is not enough grease, assemble the cable after applying additional grease.