


6. Sunroof Switch

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the spot map light. <Ref. to LI-28, REMOVAL, Spot Map Light.>
- 3) Disconnect the harness connector, and then remove the sunroof switch (A).

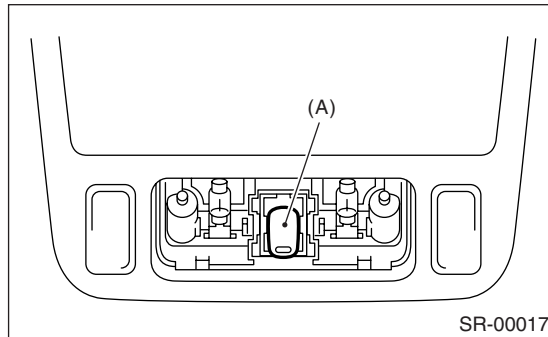

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

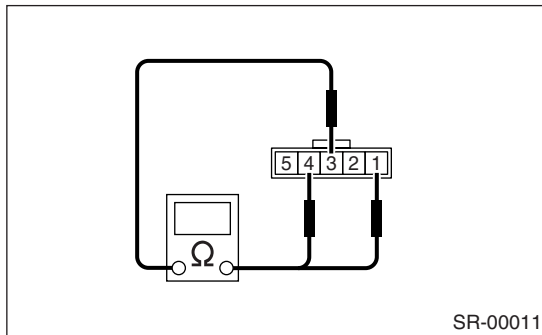

Inspect the continuity between each terminal during operation of the switches.

Switch	Terminal No.	Standard
Open	1 and 3	Less than 1 Ω
Close	3 and 4	Less than 1 Ω

Sunroof Switch

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

EXTERIOR/INTERIOR TRIM

EI

	Page
1. General Description	2
2. Front Grille	16
3. Front Hood Grille	17
4. Front Under Cover	20
5. Front Bumper	21
6. Rear Bumper	27
7. Mud Guard	29
8. Cowl Panel	30
9. Side Sill Spoiler	31
10. Side Garnish	32
11. Front Door Trim	33
12. Rear Door Trim	34
13. Glove Box	35
14. Roof Rail	36
15. Console Box	37
16. Instrument Panel Assembly	38
17. Upper Inner Trim	41
18. Lower Inner Trim	42
19. Rear Quarter Trim	43
20. Sun Visor	44
21. Roof Trim	45
22. Rear Gate Trim	46
23. Floor Mat	47
24. Luggage Floor Mat	48
25. Instrument Panel Center Compartment	49
26. Heat Shield Cover	50