


### 4. Wiper Blade

#### A: REMOVAL

While pushing the locking clip (A) up, pull out the blade to the direction of the arrow and remove it from the wiper arm.

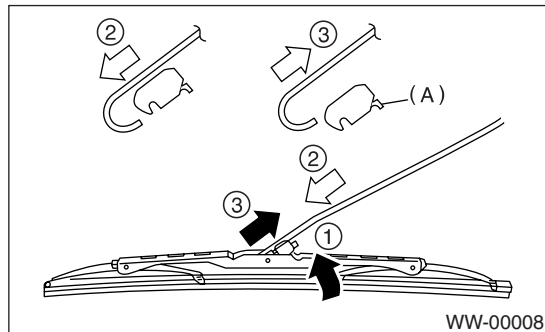


#### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Confirm that the clip is locked securely.

#### C: DISASSEMBLY


Pull side (A) of the wiper rubber stopper and remove the rubber from the blade assembly.

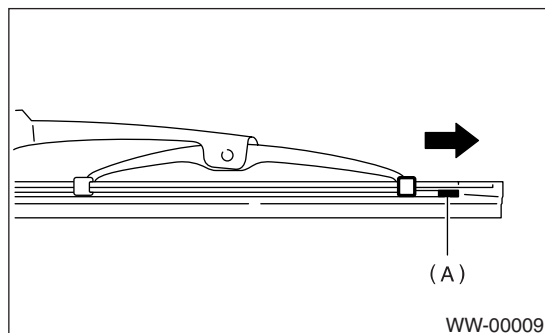


#### D: ASSEMBLY

##### 1. METAL TYPE


- 1) Insert the wiper rubber onto the blade so that the stopper is in the position shown.

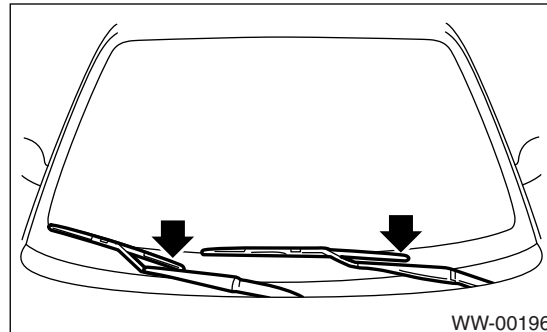


- 2) Make sure the wiper rubber is securely fastened to the pull stopper (A).

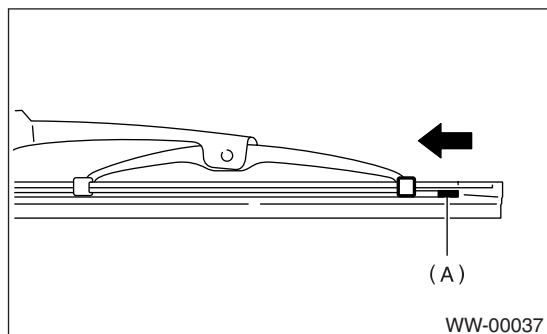


### 2. RESIN TYPE

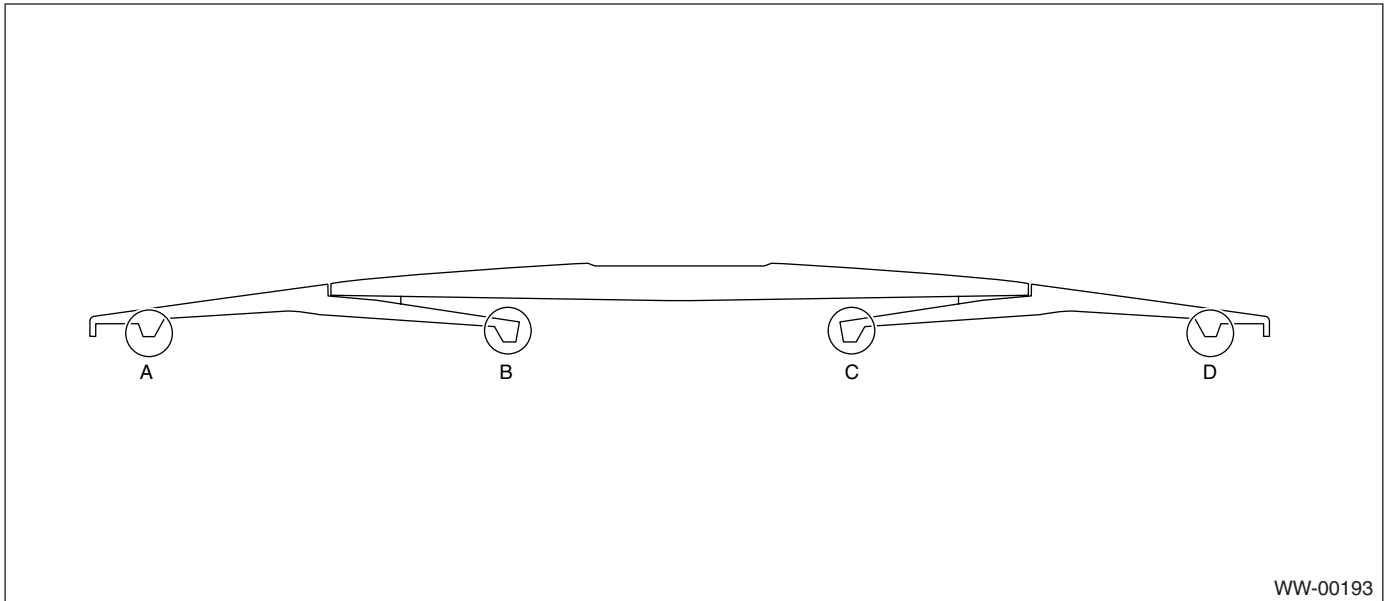

1) Insert the wiper rubber into claw (B).

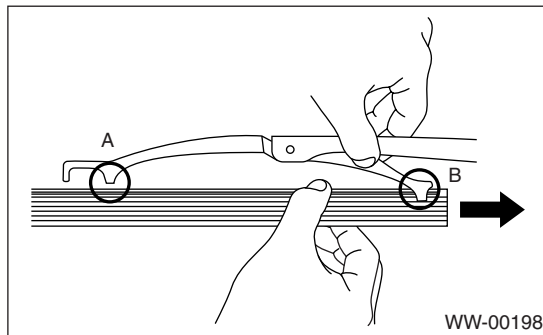


2) Insert the wiper rubber until its top end protrudes approx. 20 mm (0.79 in) from stopper (D).

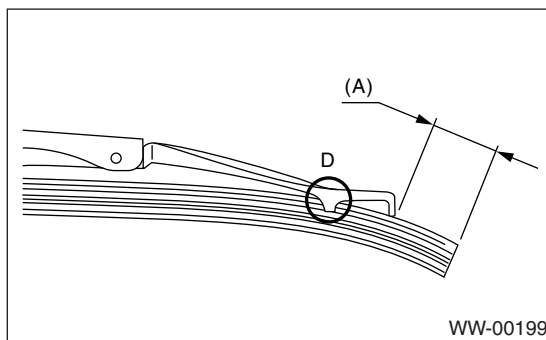

(A) 20 mm (0.79 in)

3) Insert the wiper rubber into claw (A).

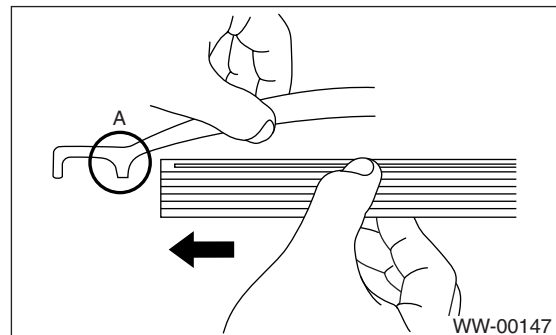

### E: INSPECTION

1) When the wiper does not operate properly, inspect the following item.

- Make sure the movable part of blade assembly moves smoothly.
- Make sure the wiper rubber is not deformed or damaged.

2) Replace with a new part if damage is found.