


### 8. Front Washer Nozzle

#### A: REMOVAL

- 1) Remove the washer hose from the washer nozzle.
- 2) Open the clips on the underside of the front hood with a thin screwdriver or other tool, and remove the washer nozzle.

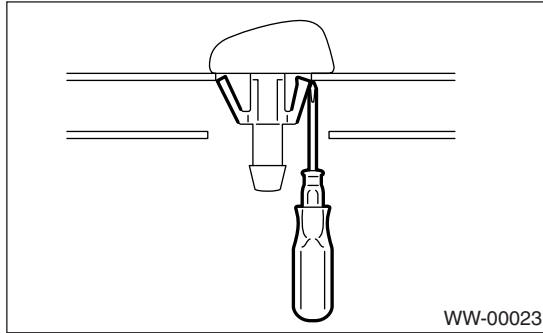

#### B: INSTALLATION

- 1) Install in the reverse order of removal.
- 2) Adjust the position of the washer liquid sprayer.  
<Ref. to WW-14, ADJUSTMENT, Front Washer Nozzle.>

#### C: INSPECTION

- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

#### D: ADJUSTMENT

##### NOTE:

It is not possible to adjust the ejection position of the washer liquid because it is the scatter nozzle.