

2. Wheel Alignment

A: INSPECTION

NOTE:

Measure and adjust the front and rear wheel alignment together. Refer to “FS” section for measurement and adjustment of wheel alignment. <Ref. to FS-5, INSPECTION, Wheel Alignment.>