

4. Aluminum Wheel

A: REMOVAL

Refer to “Steel Wheels” for removal procedure of aluminum wheels. <Ref. to WT-5, REMOVAL, Steel Wheel.>

B: INSTALLATION

Refer to “Steel Wheels” for installation procedure of aluminum wheels. <Ref. to WT-5, INSTALLATION, Steel Wheel.>

C: INSPECTION

Refer to “Steel Wheels” for inspection procedure of aluminum wheels. <Ref. to WT-5, INSPECTION, Steel Wheel.>

Rim runout:

Axial runout limit	Radial runout limit
1.0 mm (0.039 in)	

D: CAUTION

Aluminum wheels are easily scratched. To maintain their appearance and safety, be careful of the following:

- 1) Be careful not to damage the aluminum wheels during removal, installation, wheel balancing, etc. After removing aluminum wheels, place them on a rubber mat etc.
- 2) While the vehicle is being driven, be careful not to ride over sharp obstacles or allow aluminum wheels to contact the shoulder of the road.
- 3) When installing a tire chain, be sure to install it properly not to have slack, otherwise it may hit the wheel while driving.
- 4) When washing the aluminum wheel, use neutral synthetic detergent and water. Avoid using the cleansers containing abrasives, hard brushes or an automatic car washer.