


## Rear Exhaust Pipe

### EXHAUST

## 4. Rear Exhaust Pipe

### A: REMOVAL


- 1) Separate the rear exhaust pipe from center exhaust pipe.

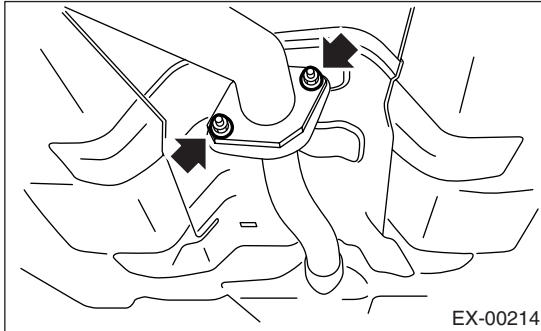

- 2) Separate the rear exhaust pipe from muffler.


#### CAUTION:

Be careful not to pull down the rear exhaust pipe.

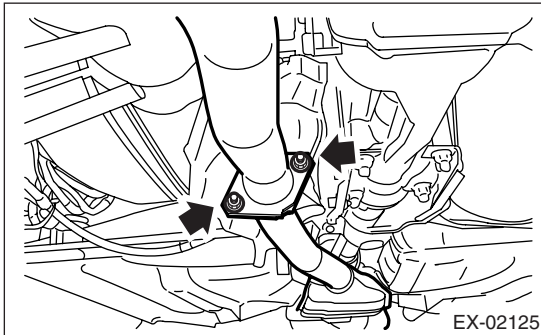

- 3) Apply a coat of spray type lubricant to the mating area of cushion rubber.


- 4) Remove the rear exhaust pipe bracket from cushion rubber.

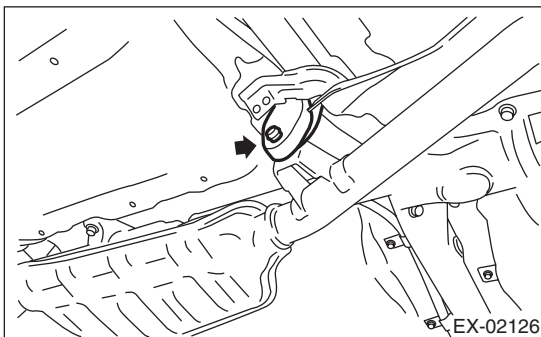

### B: INSTALLATION

- 1) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- 2) Install the rear exhaust pipe bracket to cushion rubber.

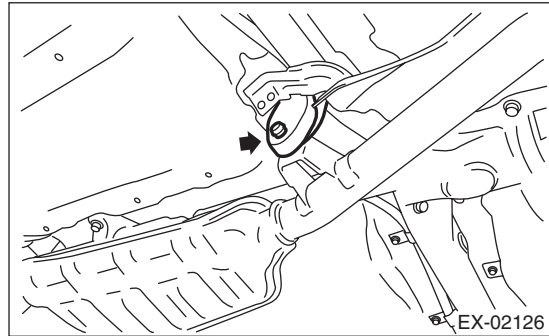


- 3) Install the rear exhaust pipe to muffler.

#### NOTE:

Use a new gasket and self-locking nut.

#### Tightening torque:


48 N·m (4.9 kgf-m, 35.4 ft-lb)

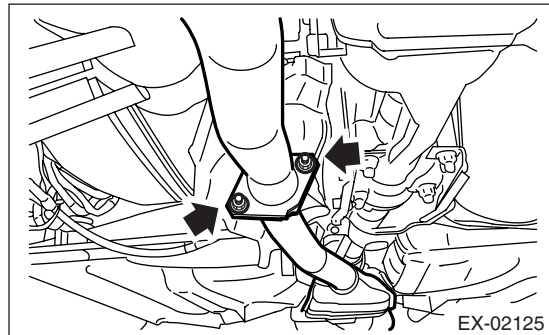

- 4) Install the rear exhaust pipe to center exhaust pipe.

#### Tightening torque:

18 N·m (1.8 kgf-m, 13.0 ft-lb)

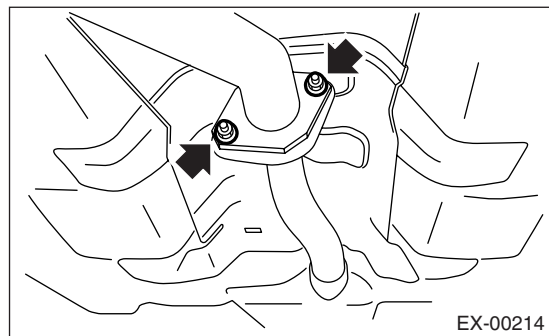

### C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Check for hole or rust.
- 3) Check the cushion rubber for wear or crack.