



5. Muffler

A: REMOVAL

1) Separate the muffler from rear exhaust pipe.

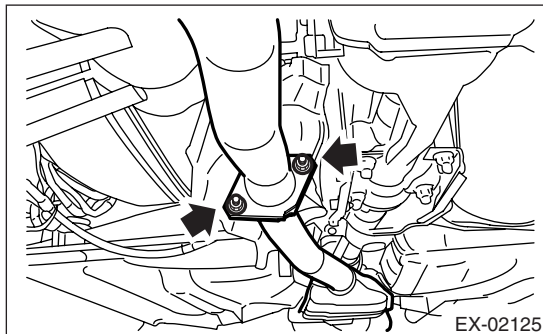

2) Apply a coat of spray type lubricant to the mating area of cushion rubber.

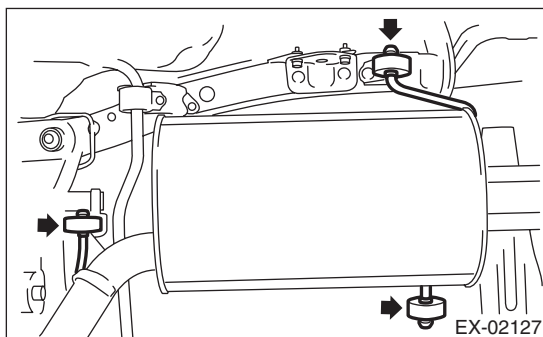

3) Remove the front and rear cushion rubber, and then remove the muffler.

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Use a new gasket and self-locking nut.

Tightening torque:

48 N·m (4.9 kgf-m, 35.4 ft-lb)

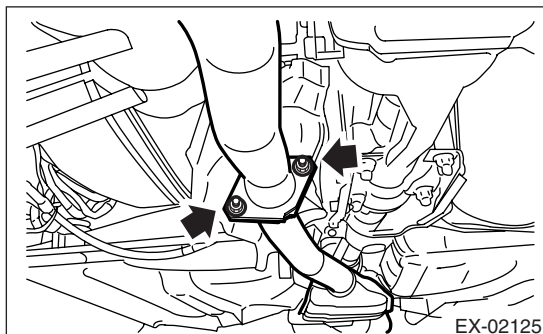

C: INSPECTION

1) Check the connections and welds for exhaust leaks.

2) Check for hole or rust.

3) Check the cushion rubber for wear or crack.

Muffler

EXHAUST

COOLING

CO(H4SO)

	Page
1. General Description	2
2. Radiator Fan System	10
3. Engine Coolant	16
4. Water Pump	18
5. Thermostat	23
6. Radiator	25
7. Radiator Cap	31
8. Radiator Main Fan and Fan Motor	32
9. Radiator Sub Fan and Fan Motor	39
10. Reservoir Tank	40
11. Coolant Filler Tank	41
12. Engine Cooling System Trouble in General	42