


5. Air Intake Duct

A: REMOVAL

- 1) Remove the bolts which install the air intake duct on the front side of body.
- 2) Remove the air intake duct.

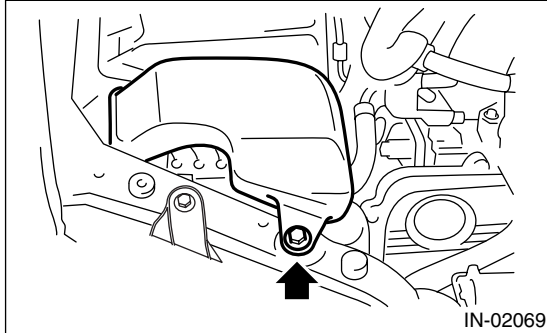

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: INSPECTION

- 1) Check for cracks or loose connection.
- 2) Inspect that no foreign objects in the air intake duct.