



6. Resonator Chamber

A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Remove the air intake duct.
- 3) Remove the air cleaner lower case.
<Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>
- 4) Remove the resonator chamber attaching bolts on the right side of the engine room.

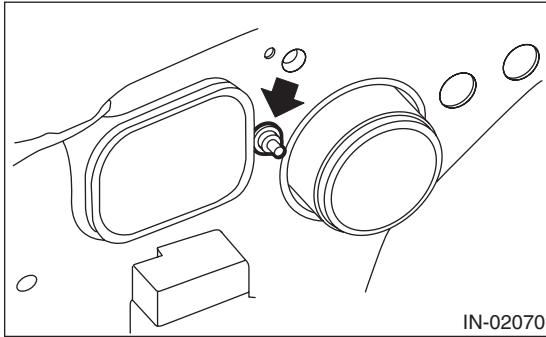

- 5) Remove the front wheel RH, and lift the vehicle.
- 6) Remove the front mudguard RH.
- 7) Remove the resonator chamber from the inside front fender.

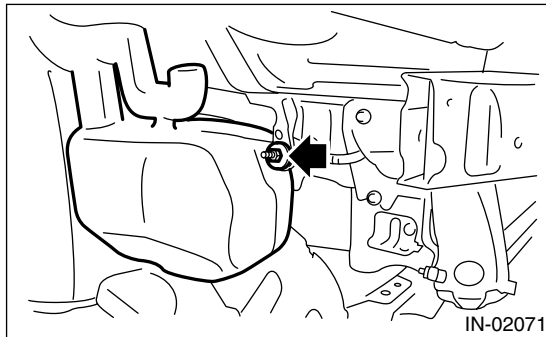

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

C: INSPECTION

Check for cracks or loose connection. Check that no foreign objects are mixed in the resonator.

MECHANICAL

ME(H4SO)

	Page
1. General Description	2
2. Compression	21
3. Idle Speed	22
4. Ignition Timing	23
5. Intake Manifold Vacuum	24
6. Engine Oil Pressure	25
7. Fuel Pressure	26
8. Valve Clearance	27
9. Engine Assembly	29
10. Engine Mounting	35
11. Preparation for Overhaul	36
12. V-belt	37
13. Crank Pulley	39
14. Timing Belt Cover	40
15. Timing Belt	41
16. Cam Sprocket	46
17. Crank Sprocket	47
18. Valve Rocker Assembly	48
19. Camshaft	51
20. Cylinder Head	56
21. Cylinder Block	64
22. Oil Switching Solenoid Valve	85
23. Intake and Exhaust Valve	87
24. Piston	88
25. Connecting Rod	89
26. Crankshaft	90
27. Engine Trouble in General	91
28. Engine Noise	96