

23. Intake and Exhaust Valve

A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of intake and exhaust valves <Ref. to ME(H4SO)-56, REMOVAL, Cylinder Head.>
<Ref. to ME(H4SO)-56, INSTALLATION, Cylinder Head.>