


2. Accelerator Pedal

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector (A).
- 3) Remove the nut (B) securing accelerator pedal assembly.

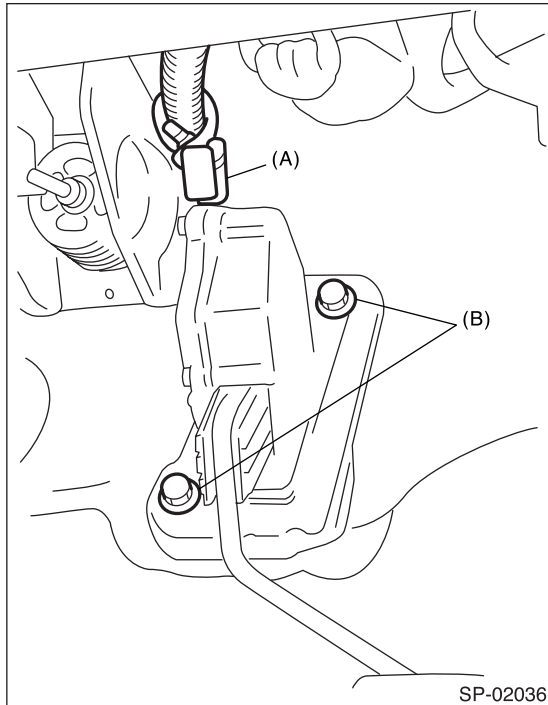

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

18 N·m (1.8 kgf-m, 13.0 ft-lb)

C: DISASSEMBLY

NOTE:

Accelerator pedal cannot be disassembled.

Accelerator Pedal

SPEED CONTROL SYSTEMS

IGNITION

IG(H4SO)

	Page
1. General Description	2
2. Spark Plug	4
3. Ignition Coil and Ignitor Assembly	7
4. Spark Plug Cord	8

