

16.PCV Hose Assembly


A: REMOVAL

CAUTION:

Do not remove other parts if the PCV hose, diagnostics connector and PCV valve are damaged.

- 1) Remove the air intake chamber.
<Ref. to IN(H4SO)-6, REMOVAL, Air Intake Chamber.>
- 2) Fit the depression in the ST with the protrusion on the clamp to unlock.
- 3) Remove the PCV hose assembly.

ST 18353AA000 CLAMP PLIERS

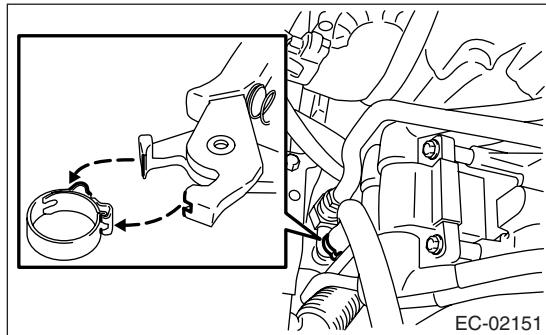


B: INSTALLATION

NOTE:

Replace the clamp with a new one.

- 1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.

ST 18353AA000 CLAMP PLIERS

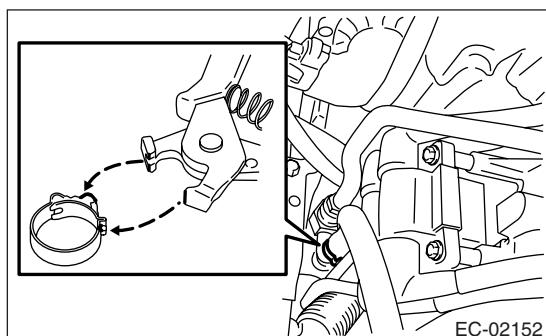

- 2) Install the air intake chamber.

<Ref. to IN(H4SO)-6, INSTALLATION, Air Intake Chamber.>

INTAKE (INDUCTION)

IN(H4SO)

	Page
1. General Description	2
2. Air Cleaner Element	4
3. Air Cleaner Case	5
4. Air Intake Chamber	6
5. Air Intake Duct	7
6. Resonator Chamber	8