

## 2. Front Catalytic Converter

### A: REMOVAL

The front catalytic converter is integrated into front exhaust pipe as one unit; therefore, refer to "Front Exhaust Pipe" for removal procedure. <Ref. to EX(H4SO)-4, REMOVAL, Front Exhaust Pipe.>

### B: INSTALLATION

The front catalytic converter is integrated into front exhaust pipe as one unit; therefore, refer to "Front Exhaust Pipe" for installation procedure. <Ref. to EX(H4SO)-5, INSTALLATION, Front Exhaust Pipe.>

### C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.