


Canister

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

5. Canister


A: REMOVAL

1) Disconnect the ground cable from the battery.

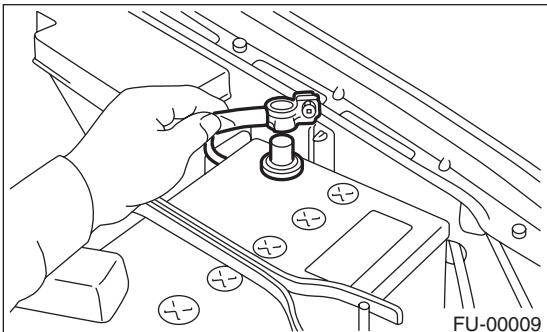


2) Lift-up the vehicle.

3) Disconnect the connector (A) from drain valve.
4) Disconnect the evaporation hoses (B) and (C) from the canister.

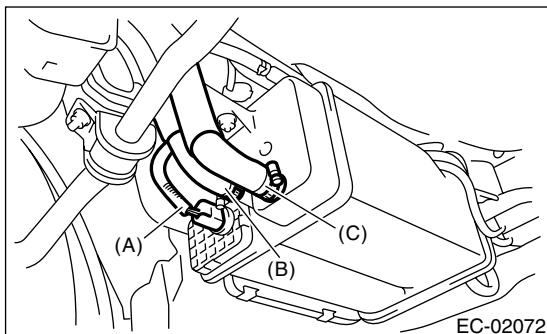


5) Disconnect the quick connector (A) from the canister.

6) Disconnect the drain hose (B) from the canister.

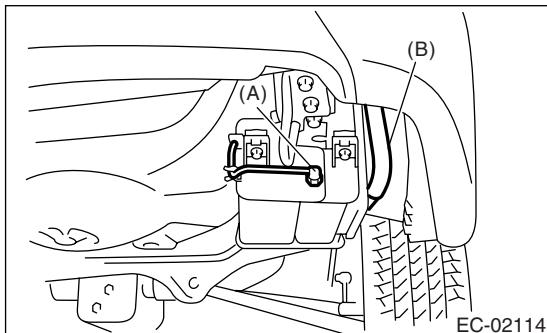

7) Remove the canister from the body.

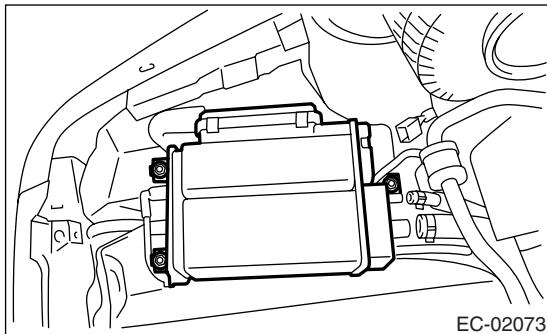


B: INSTALLATION

NOTE:

- Replace the retainer of quick connector with a new one.
- Install in the reverse order of removal.

Tightening torque:

23 N·m (2.3 kgf·m, 17 ft·lb)

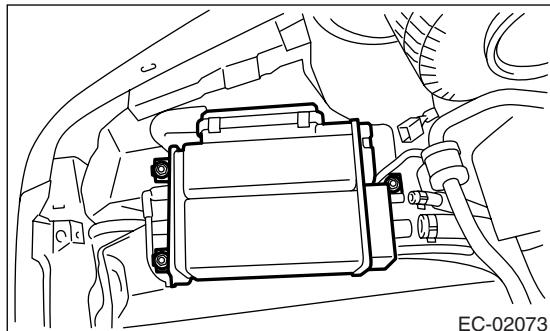

C: INSPECTION

Make sure the canister and canister hoses are not cracked or loose.