


# Variable Valve Lift Diagnosis Oil Pressure Switch

## FUEL INJECTION (FUEL SYSTEMS)

### 13. Variable Valve Lift Diagnosis Oil Pressure Switch


#### A: REMOVAL

- 1) Disconnect the ground cable from battery.

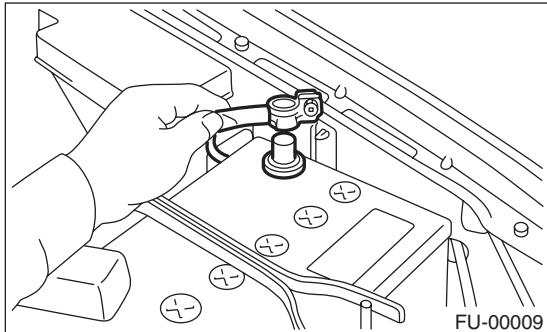


- 2) Remove the air intake chamber. <Ref. to IN(H4SO)-6, REMOVAL, Air Intake Chamber.>
- 3) Remove the engine harness connector from the bracket.
- 4) Disconnect the connector from the variable valve lift diagnosis oil pressure switch.
- 5) Remove the variable valve lift diagnosis oil pressure switch.

- LH side

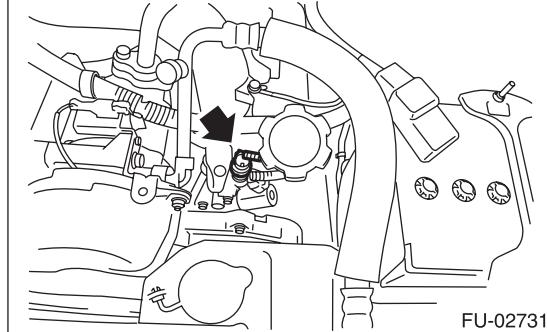

- RH side

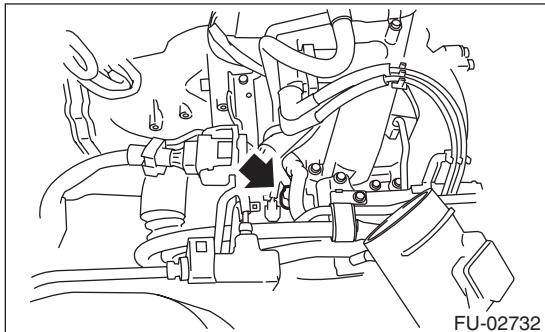

#### B: INSTALLATION

Install in the reverse order of removal.

##### NOTE:

Apply liquid gasket to the variable valve lift diagnosis oil pressure switch threads.

##### Liquid gasket:

*Three bond 1324 (Part No.004403042) or equivalent*

##### Tightening torque:

*17 N·m (1.7 kgf-m, 12.5 ft-lb)*